


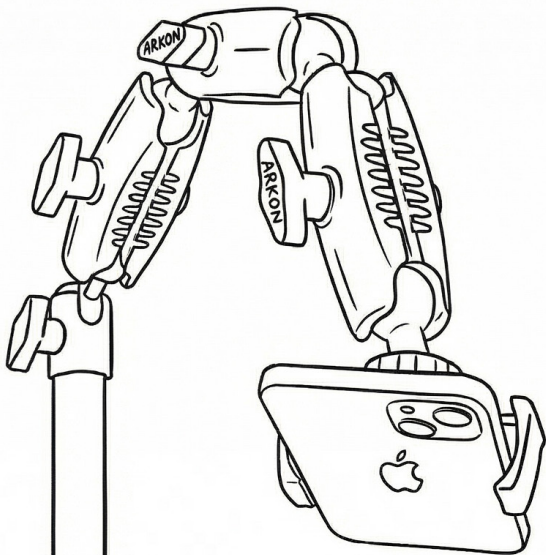

***ARKON[®]* MOUNTS** **REMARKABLE CREATOR**


Quick Start Guide

MOUNT. ADJUST. CREATE.

Purpose-built systems for hands-on creators.

The ARKON Creator Mount System is made for creators who want a clean, stable setup that just works.

With multiple versions to fit different spaces, each mount lets you position your phone, tablet, camera, or projector exactly where you want it—so you can focus on creating, not fixing your shot.

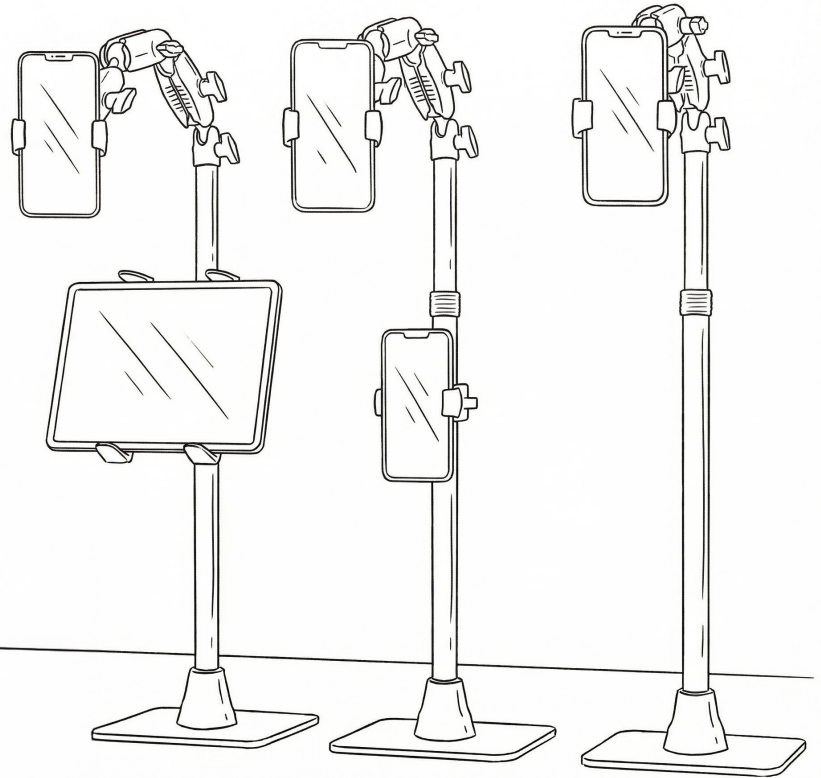

IMPORTANT

Register Your Mount Today!

Scan the QR code to register your product and extend your product warranty for life!

Your model may vary from the above systems

WHAT'S IN THE BOX

Review all included parts before assembly. Components may vary by model. If anything is missing or damaged, contact ARKON support before getting started.

Included with all Creator Models


1. Overhead Arm Assembly
2. Telescoping Pole
3. (3a) Phone Holder or (3b) Magnetic Phone Holder
4. Tightening Ring
5. 25mm to 17mm Ball Adapter
6. Camera or Projector Mount
7. Tightening Wrench
8. (8a) Padded Base or (8b) Clamp Base

Pro+Plus Models only

9. Tablet Holder with Pole Clamp Mount

Cookie Decorator Models only

10. Phone Holder with Pole Clamp Mount

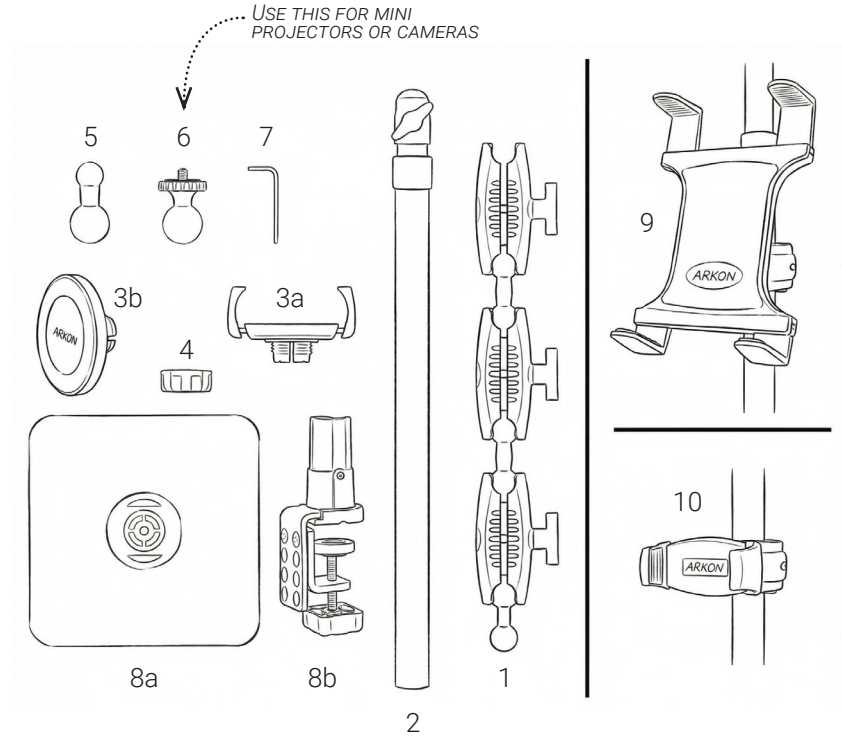


ASSEMBLY

All Models


1. Insert the Pole into the Base

Place the pole into the base opening.
Use the included tightening wrench to secure it in place.

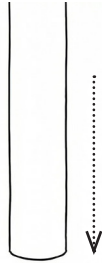

2. Tighten the Base Connection


Turn the fastener clockwise until the pole is firmly locked.
Do not overtighten.

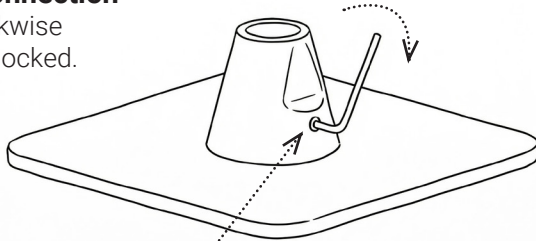

THERE IS A SMALL SCREW
LOCATED INSIDE THE HOLE.
MAKE SURE THE WRENCH
IS INSERTED CORRECTLY.

3. Attach the Overhead Arm


Loosen the ball socket at the top of the pole. Insert the metal ball end of the arm into the ball socket, then tighten to secure.

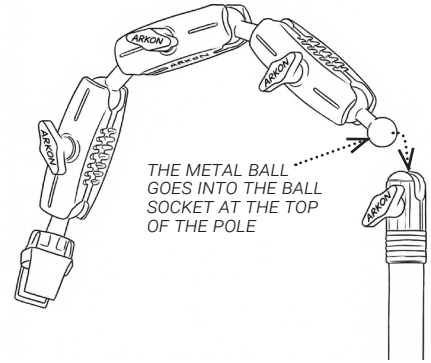

THE METAL BALL
GOES INTO THE BALL
SOCKET AT THE TOP
OF THE POLE

4. Attach the Device Holder

Slide the tightening ring over the ball. Press the holder onto the ball joint, adjust to the desired angle, then tighten the ring.

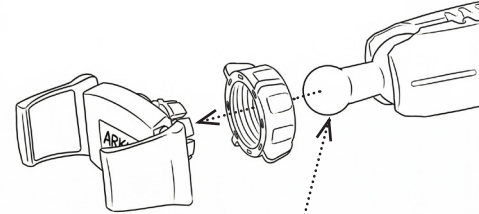


THIS BALL END GOES
THROUGH THE RING AND
INTO THE BACK SOCKET
OF THE HOLDER

ADDITIONAL STEPS


Additional instructions for Pro+Plus models

Attach the tablet holder and pole clamp to the arm, then position it on the pole at the desired height and tighten to secure.

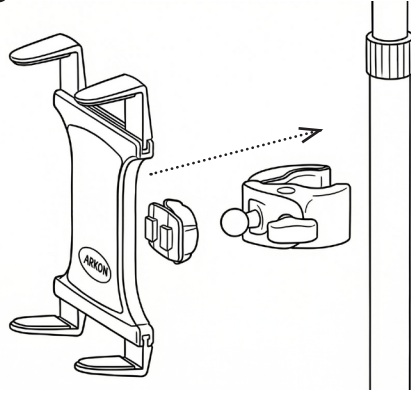

Additional instructions for Cookie Decorator models


Attach the phone holder and pole clamp to the arm, then position it on the pole at the desired height for overhead use and tighten to secure.

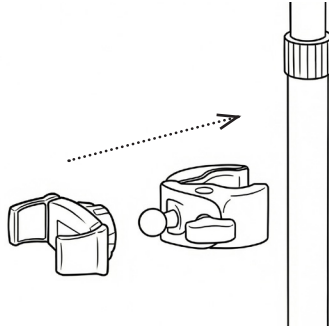

CAMERA / PROJECTOR SETUP


Add a camera or projector to your setup

This screw inserts into most mini projectors and cameras

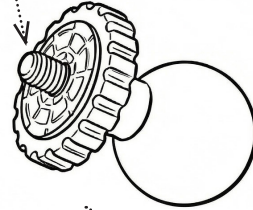

Remove the phone holder and replace it with the included Camera/Projector Ball Adapter to mount a camera or mini projector.


Attach your device, adjust the arm to the desired position, and tighten all knobs to secure.

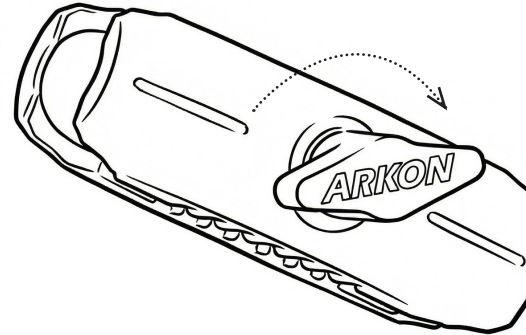

SETUP TIPS

Set the Arm for Better Balance

Turn the overhead arm so it points toward a corner of the base instead of straight out to the side. This keeps the mount more balanced and helps prevent tipping while in use.

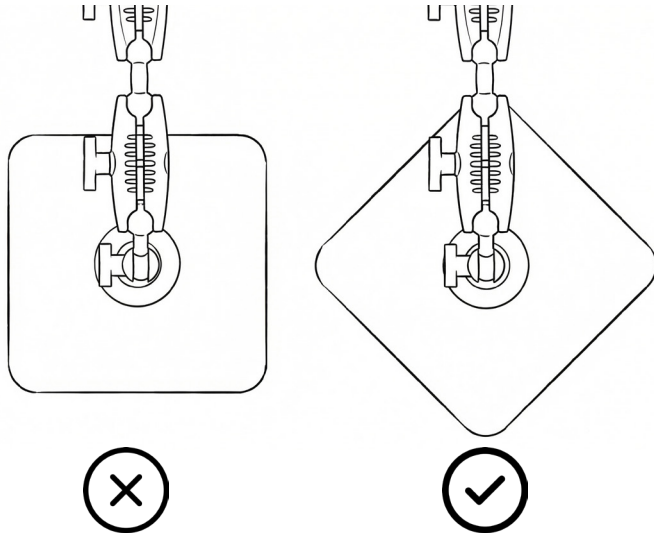


TROUBLESHOOTING

If the Arm Sags or Slips

If the arm moves or sags after placing your device in the holder, tighten all **four** adjustment knobs along the arm. Make sure each joint is firmly secured before use.

Hand-tighten only.
Check knobs again after positioning your device.

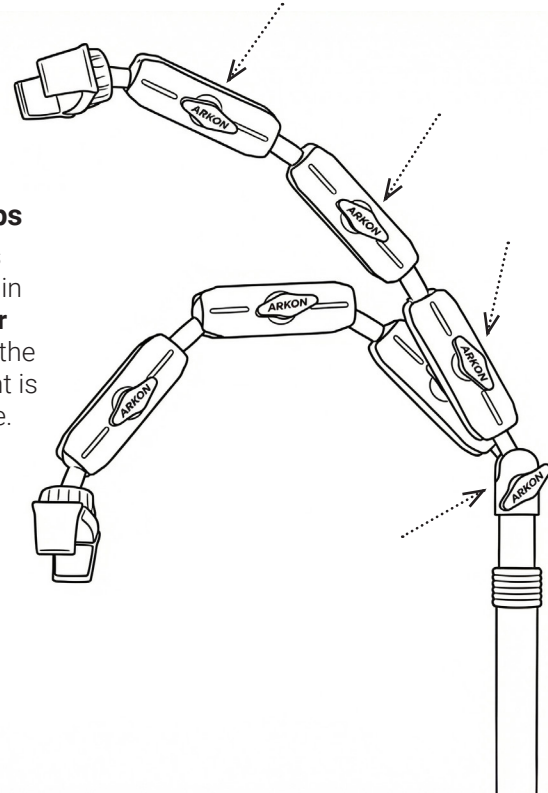

ARKON MOUNTS **REMARKABLE CREATOR**



**Looking for add-ons or
replacement parts?**

Scan the QR code to visit
our website.

Contact Us

(800) 841-0884 • 9AM-5PM PST (M-F)

service@arkon.com

arkon.com