



Attach pedestal clamp by turning the c-clamp knob clockwise; adjust the clamp bracket position if necessary with a Phillips screwdriver. Place ring over ball, attach camera bolt adapter over ball, and tighten to set to position.

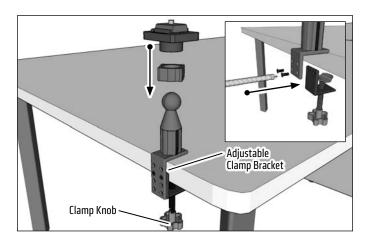

3 Unscrew lateral screw and insert GoPro camera to the adapter. Re-insert lateral screw.

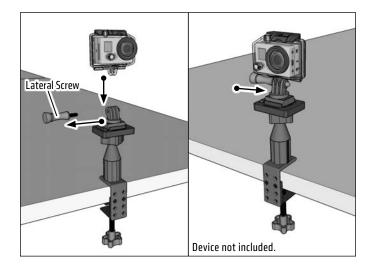

Package Contents:

GN086-SBH - C-Clamp Mounting Pedestal with 4" Adjustable Arm

AP-CMP - 1/4"-20 Camera Bolt Adapter

SP-SB-AMPS-22 - 4-Hole AMPS Swivel Ball Head for 22mm Pedestals

SP-1420-SCREW - 1/4"-20 to GoPro® Mount Connection Adapter


NOTE: C-Clamp Opening: 0" – 3" (0mm – 76mm)

Device Compatibility:


Compatible with GoPro® HERO® action cameras, as well as 1/4"-20 compatible cameras.

GoPro® and HERO® are trademarks or registered trademarks of Woodman Labs, Inc. in the United States and other countries. Arkon Resources, Inc. is not affiliated with Woodman Labs.

2 Screw the GoPro adapter onto the mount's 1/4"-20 bolt.

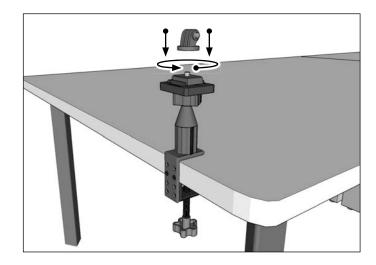

OPTIONAL: Release the GoPro camera by pressing on the release tab.

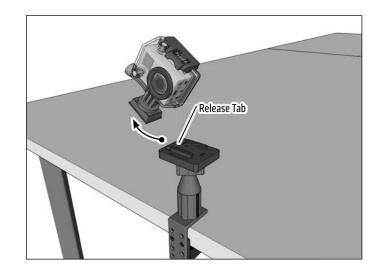

Safety Precautions

Arkon is not responsible for any damages caused to your device or yourself due to the installation or use of this mount.

ARKON'MOUNTS

Consumer Hotline: **USA** (800) 841-0884 **INT'L** (626) 254-9005 Monday - Friday 9am-5pm, PST www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in China & Taiwan
© Copyright 2021 Arkon Resources, Inc.