


If your current Pro Stand model has a WEIGHTED BASE:


1

Remove upper arm assembly from current Pro Stand pole. Loosen pole from the base using hex key, and remove pole from the base.

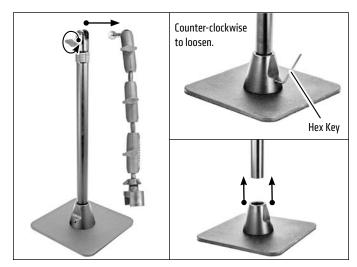


If your current Pro Stand model has a CLAMP BASE:


Remove upper arm assembly from current Pro Stand pole. Loosen pole from the clamp base using hex key, and remove pole from the clamp base.

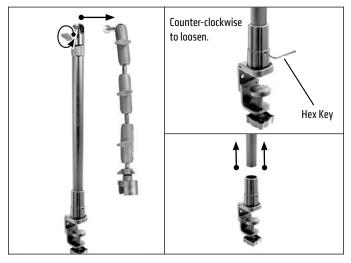

Insert pink pole into the base collar and secure with hex key. PLEASE NOTE – this will be a tight fit and will require some force. Reattach the upper arm assembly.

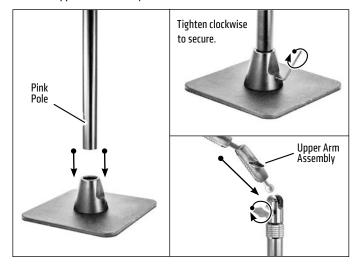

Insert pink pole into the clamp collar and secure with hex key. PLEASE
NOTE — this will be a tight fit and will require some force. Reattach the upper arm assembly.

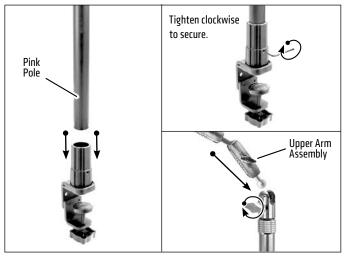



Devices should be detached or removed from the Pro Stand before unclamping or moving. Always use two hands (one on pole, one on base) when carrying. Always make sure all clamps are tightly secured before using the stand. Arkon Resources Inc. is not responsible for any damages caused to your device or yourself due to the installation or use of this stand.

Consumer Hotline: USA (800) 841-0884 WWW.arkon Arcadia, CA 9100

INT'L (626) 254-9005 Monday - Friday 9 am - 5 pm, PST www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan and USA © Copyright 2020 Arkon Resources, Inc.