
APVHB13 | Dashboard Mounting Disk with 3M[™] VHB[™] Adhesive




Dashboard Mounting Instructions

Choose a suitable location for disk (and pedestal) installation. Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road or hinder vehicle operation. Clean the dashboard surface area thoroughly with the included alcohol pad. Allow the area to dry completely before applying the mounting disk.

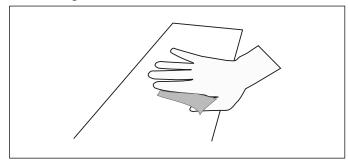

Place the suction cup of the pedestal (sold separately) firmly down on the center of the mounting disk and lower the securing lever.

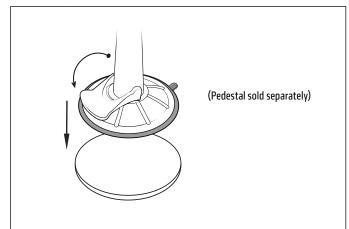


Package Contents:

(1) 80mm Adhesive Dashboard Mounting Disk (1) Alcohol Cleaning Pad

No tools required for installation.

WARNING: Use caution and discretion when adhering APVHB13/20/36 to your car dashboard or other flat surface. This disk uses 3M VHB adhesive, which is designed to be a PERMANENT solution. Use of this disk may result in permanent adherence to the selected surface. Professional strength solvents or tools may be helpful in removing the adhesive. Arkon is not responsible for any damage caused to your vehicle or other surface due to the installation of this mounting disk. Adhesive disks with a semi-permanent bonding strength (Model AP036 – 70mm, Model AP013 – 80mm, Model AP020 – 90mm) are available from Arkon.

Remove the paper backing of the disk and place on the cleaned surface. Press down firmly in order to create adhesive contact and bond strength with the surface. Allow 24 hours for the adhesive to cure to the surface before applying any pressure.

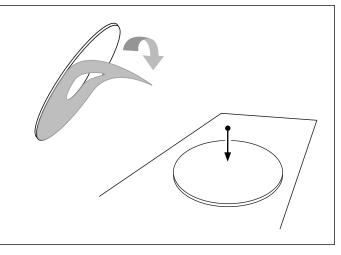



 Consumer Hotline:

 USA
 (800) 841-0884

 INT'L
 (626) 254-9005

 Monday - Friday 9 am - 5 pm, PST

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan © Copyright 2015 Arkon Resources, Inc.