CM017-KST Robust Base 5" Windshield Suction Pedestal




CM017-KST-2






CM017-KST-1

CM017-KST-AMPS

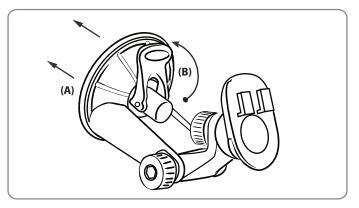


Windshield Installation

Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.

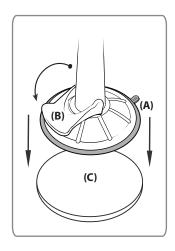


Dash Installation (Optional, when disc is included)

- Step 1. Locate a safe flat surface on the dash or console to mount the pedestal. Clean the dash with the alcohol pad provided. Let the dash surface dry before applying the adhesive disc (C).
- Step 2. Push the pedestal suction cup (A) firmly to the disc (C). Flip the lever (B) down to secure the suction cup.

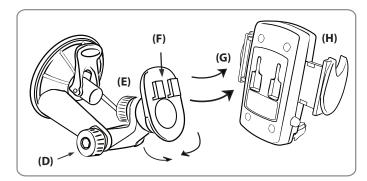

Gooseneck and Dual-T Head Instructions

- Step 1. Adjust the angle of the pedestal head by loosening the adjustment knob (D).
- Step 2. Adjust the angle and rotation of the pedestal head by loosening the adjustment knob (E).
- Step 3. Attach the device cradle (H) to the dual-T tab head (F) by inserting the T-tabs into the T-slots (G). (Cradles are sold separately and vary depending on the device that you are using)

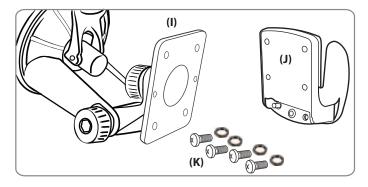

AMPS Configuration Instructions (For any device or cradle with a 4-hole AMPS configuration)

Step 1. Secure the AMPS pedestal head (I) to the device or device cradle (J) by using a screwdriver to secure the pedestal head with the nuts and screws (K) to the cradle. (Cradles, nuts and screws shown not included)



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.



The Mobile Mounting Specialists

Consumer Hotline: (USA) (800) 841-0884 (INT'L) (626) 254-9005 www.arkon.com Arcadia, CA 91006 USA Made in Taiwan

Mon-Fri. 9am-5pm, PST © Copyright 2007 Arkon Resources, Inc.