



Package Contents:

(1) GN085-SBH - 4" Heavy-Duty C-Clamp Mounting Pedestal (1) OPTIONAL - Rubber Clamp Boot

- 1 Open the C-clamp on the bottom of the mount by turning the to secure on mounting area. Slide optional rubber clamp boot onto the top of the mount's clamp to prevent scratching clamp
- clamp knob counter clockwise. Tighten the clamp knob clockwise surface if desired.
- 2 Attach holder (sold separately) to the C-clamp mount by inserting the Dual T-Tabs of the pedestal into the Dual T-Slots of the holder and sliding the holder down to lock.

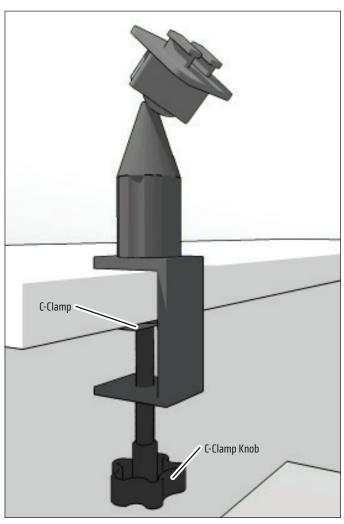

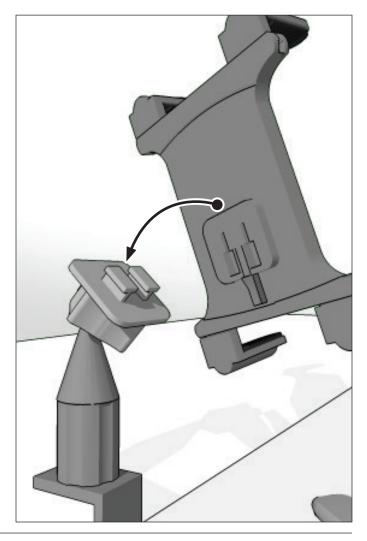



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.



The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884 **INT'L** (626) 254-9005 Monday - Friday 9 am - 5 pm, PST

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in China © Copyright 2017 Arkon Resources, Inc.