


1 To attach magnet kit to adhesive adapter, slide ring over 17mm ball, snap magnetic head onto ball. Adjust angle and tighten adjustment ring to secure. Remove paper backing of adhesive metal plate. Firmly press the adhesive side to clean, back surface of your smartphone, case, or other device.

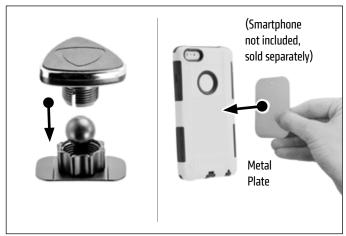

 Place metal plate on the device in contact with the magnet head on the pedestal to attach. Rotate or adjust angle as needed.




Package Contents:

- (1) GNO29VHB-B 1.5" VHB Adhesive to 17mm Ball Adapter
- (1) SPIBMAG Heavy-Duty Magnet Mount Kit

WARNING: Use caution and discretion when adhering IBMAG129 to your car dashboard or other flat surface. This mount uses 3M VHB adhesive, which is designed to be a PERMANENT solution. Use of this mount may result in permanent adherence to the selected surface. Professional strength solvents or tools may be helpful in removing the adhesive. Arkon is not responsible for any damage caused to your vehicle or other surface due to the installation of this mount.

2 Remove red adhesive backing and attach mount to chosen surface.

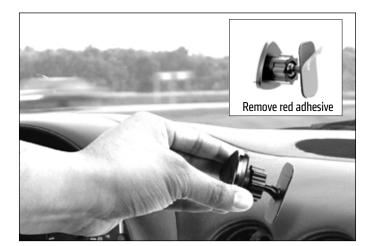



Safety Precaution

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment. Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.

ARKON MOUNT

Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005 Monday - Friday 9 am - 5 pm, PST

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan © Copyright 2018 Arkon Resources, Inc.