
MC2C | Premium Motorcycle Mount - Chrome




1 Place handlebar spacer/adapter ring around handlebar. Attach mount to handlebar around spacer. Use the included hex key to securely tighten both mounting screws.

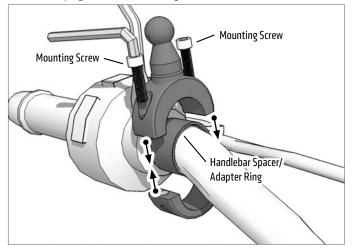



Insert Garmin nüvi into mounting bracket (not included).

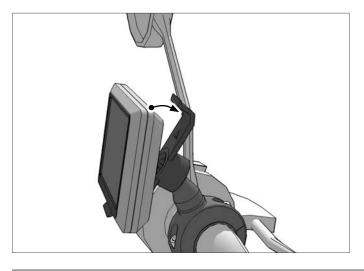



Safety Precautions

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.

Package Contents:

MC2C- Premium Motorcycle Handlebar Mount - Chrome 68111-K - Handlebar Spacer Rings

The Premium Motorcycle Mount comes with 3 handlebar spacer/adapter rings of different sizes. Select the appropriate size for optimum mounting to your handlebar.


Fits on handlebars and poles .85"-1.2" (21.68mm-30mm) in diameter.

Compatible with Garmin[®] devices:

Garmin[®] nüvi[®] - nuvi 200, 200w, 205, 205w, 250, 250w, 255, 255w, 260, 260w, 265T, 265WT, 270, 275T, 285WT, 300, 300T, 310, 310T, 350, 360, 360T, 370, 370T, 500, 550, 600, 610, 650, 660, 670, 680, 710, 750, 755T, 760, 760T, 765T, 770, 775T, 780, 785T, 850, 855, 860, 880, 885T, 1200, 1250, 1260T, 1300, 1350, 1340T, 1350T, 1370T, 1390T, 1450, 1490T, 1690, 5000

The Garmin brand name and nüvi product name are trademarks or registered trademarks of Garmin International.

2 Connect Garmin nüvi mounting bracket (not included, sold separately) to the pedestal. See compatibility above.

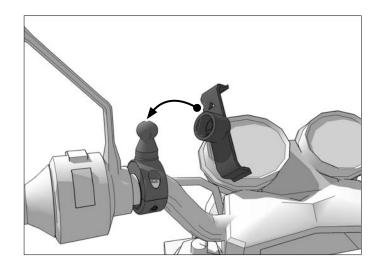



Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005 Monday - Friday 9am - 5pm, PST

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in USA © Copyright 2021 Arkon Resources, Inc.