


Includes:


- 1 - Manual
- 1 - Robust Double Socket Swivel Arm (SPRMSWA)
- 1 - Heavy-Duty Windshield Suction Base with 25mm Ball (SPRM080)
- 1 - Alcohol Pad

Prep: Clean the surface using the provided alcohol pad and make sure it is free of dirt, dust, and grease before installing the mounting hardware.


- 1 Assemble the components**
To install the double socket swivel arm and heavy-duty suction base, first loosen the knob on one end of the swivel arm by turning it counterclockwise. Then, insert the ball adapter into the swivel arm. Next, turn the knob clockwise to tighten.

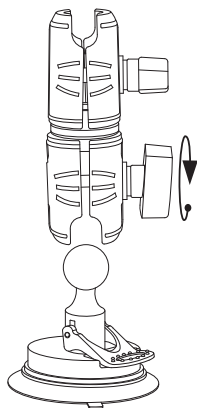

- 2 Install the mount to a flat surface**
To install the mount to a flat surface, place it on the desired location and pull the lever down to secure the base.

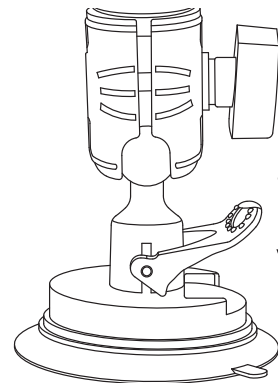

- 3 Optional - To install a tablet holder to the mount**
To install a tablet holder, first, loosen the knob at the top end of the swivel arm by turning it counterclockwise. Then, insert the ball adapter connected to the tablet holder into the swivel arm. Next, turn the knob clockwise to tighten.

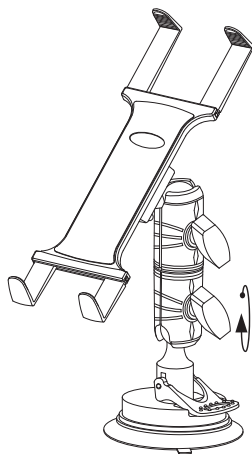

WARNING
CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING
Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

