



1 Attach pedestal to windshield, engage suction lock.

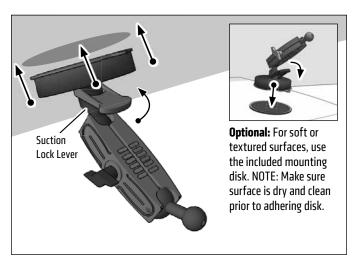

3 Using two hands, insert the phone into the holder by pushing the device into one of the spring-loaded legs. Expand the other leg and fully insert device until it lays flat against the blue rubber pad.

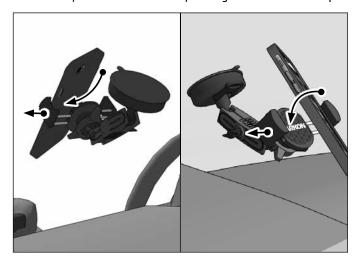

Package Contents:

RV001WR – RoadVise™ Premium Universal Smartphone Holder with Ring

RM080 - Robust Mount Shaft with Suction Base

SP25MM17 - 25mm Ball to 17mm Ball Adapter


APO20 - Adhesive Dash Mounting Disk (Optional)*

IMPORTANT: Do not overtighten ring. Overtightening ring may damage threads on holder and also make it difficult to adjust holder.


Fits smartphones with cases weighing up to 2 pounds and measuring up to 4" wide.

*Let mounting disk adhesive cure for 24 hours before use.

Place adjustment ring over the pedestal ball and snap the RoadVise Holder onto the pedestal.

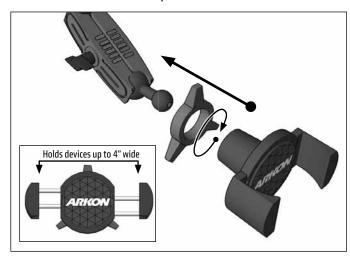

4 RoadVise Holders work best with smartphones using a case. For maximum grip, make sure to use a ruggedized case while using this product.

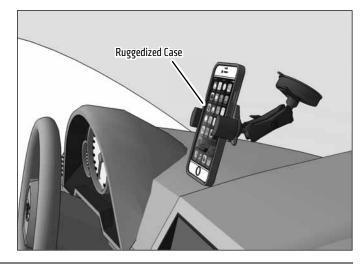



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.



The Mobile Mounting Specialists™

Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in USA & Taiwan Monday - Friday 9am - 5pm, PST © Copyright 2016 Arkon Resources, Inc.