



1 Place handlebar spacer/adapter ring around handlebar. Attach mount to handlebar around spacer. Use the included hex key to securely tighten both mounting screws.

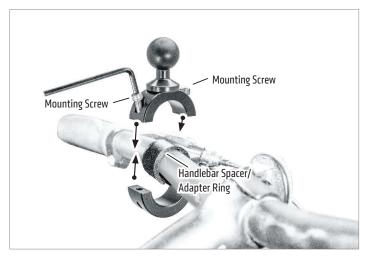

3 Place tightening ring over the mount's ball. Snap the RoadVise Holder onto the mount and tighten adjustment ring to set position.

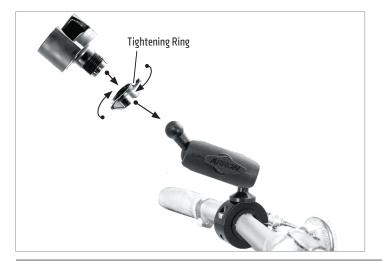

Safety Precautions

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.

Package Contents:

- (1) MC25MMB Motorcycle Handlebar Mount Pedestal
- (1) SP-RMS250 Small Robust Mount Shaft
- (1) RV001WR-B RoadVise® Universal Smartphone Holder
- (1) SP25MM17- 25mm Ball to 17mm Ball Adapter

This Motorcycle Mount fits cylindrical handlebars up to 30mm diameter and comes with 3 handlebar spacer/adapter rings of different widths. Select the appropriate size for optimum mounting to your handlebar.

IMPORTANT: Do not overtighten ring. Overtightening ring may damage threads on holder and make it difficult to adjust holder.

Attach Robust Mount Shaft by unscrewing knob to loosen collar. Adjust angle then retighten knob to secure.



Using two hands, insert phone into the holder by pushing the device into one of the spring-loaded legs. Expand the other leg and fully insert device until it lays flat against the blue rubber pad. Rotate or adjust angle as needed.



ARKON MOUNTS

Consumer Hotline: **USA** (800) 841-0884 **INT'L** (626) 254-9005 Monday - Friday 9am-5pm, PST www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in USA
© Copyright 2019 Arkon Resources, Inc.