



Place the mount and tighten the 4 screws (included) through the drill base holes into the mounting surface. You may need to first drill pilot holes and / or insert the included screw anchors depending on the mounting surface.

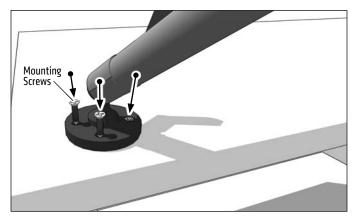

Insert device by pushing down on the lower support legs and engaging the spring-loaded mechanism. Adjust support legs as necessary.

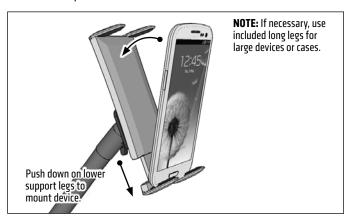

Package Contents:

HD005 – 10" Heavy-Duty Aluminum Drill-Base Mount


 (1) set of (4) screws

SM060-2 – Slim-Grip[®] Ultra[™] Smartphone and Midsize Tablet Holder

IMPORTANT: Drilling into furniture or a vehicle dash or console is a permanent installation and will cause damage to the mounting surface. Use caution and consult an installation professional to avoid drilling into the gas tank, electrical system or other highly sensitive vehicle components.

NOTE: Select the appropriate short or long support legs and install to holder. For large sized smartphones such as the Galaxy Note and midsize tablets, select 4 long support legs.

2 Attach the holder to the mount by inserting the Dual T-Tabs of the mount into the holder.

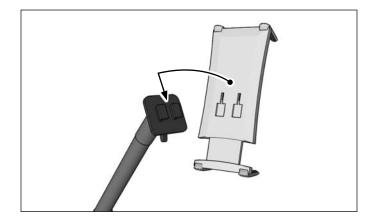



Safety Precaution

Arkon Resources, Inc. is not responsible for any damages caused to your vehicle, furniture or yourself due to the install of this product.



Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005 Monday - Friday 9 am - 5 pm, PST www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan © Copyright 2015 Arkon Resources, Inc.