


SP-RMSH-KIT

SPRMLGKNOBNL


1 A Separate the headrest mount bracket, and place on 2-post headrest. **B** Use a 10mm socket wrench to tighten the bolts.

SP-12M-4M7


APMAMPS25MM

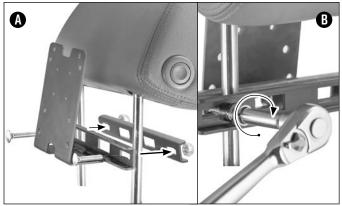

3 To size the tablet holder to your tablet, begin by unlocking the top of the tablet holder with the key and push up on the locking arm.

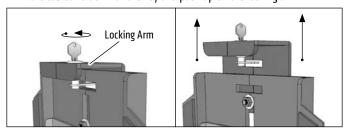

Unscrew the screws at the bottom sides of the holder to adjust the tablet holder's width to the tablet. Tighten to secure.

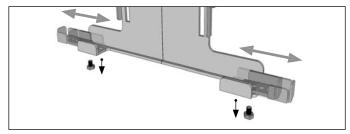

Package Contents:

HM009B – Taxi Headrest Mount

TABOO4KL-B - Locking Metal Tablet Holder with Key Lock and Key

SPRMSMET-B - Small Metal Robust Mount Shaft Arm

APMAMPS25MM - Metal 25mm Ball to 4-Hole AMPS Adapter

SP-RMSH-KIT – Robust Mount Shaft Arm Security Hardware

SP-12M-4M7 - Screw Pack

Optional (for converting locking tablet holder to NON-LOCKING option):

(1) SPRMLGKNOBNL – Large Robust Shaft Knob (see page 2)

Headrest Compatibility: Compatible with headrests having a 2-post configuration.


Device Compatibility: Fits 7"-10" screen size tablets

Tools Needed: 10mm socket wrench, Phillips screwdriver


2 Attach the tablet holder and metal shaft to the headrest mount with the provided screws.



Unscrew the three screws/washers at the back/center of the holder to adjust the tablet holder's height to the tablet (not included). Retighten the screws/washers to secure.

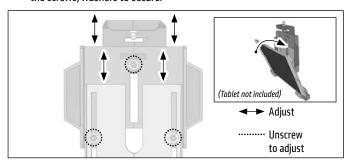

To lock down tablet, close down on the locking arm on the top of the tablet and lock with key (included).

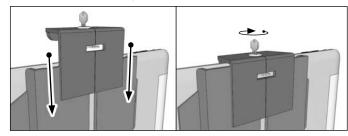



Safety Precautions


Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.

ARKON'MOUNTS


Consumer Hotline: **USA** (800) 841-0884 **INT'L** (626) 254-9005 Monday - Friday 9am - 5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in USA
© Copyright 2020 Arkon Resources, Inc.

To convert the metal locking tablet holder to a NON-LOCKING option:

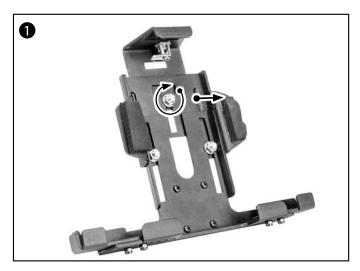


Remove nut from the center of the front of the holder.

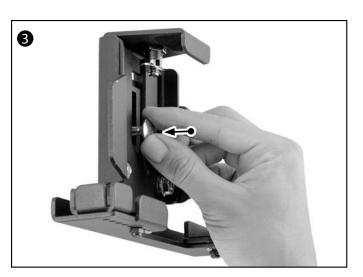

Re-insert screw to the front of the holder.



Pull screw out from the back of the holder.

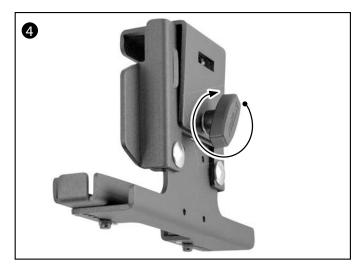

Attach knob to screw on the back of the holder.



Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.



Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in USA Monday - Friday 9am - 5pm, PST © Copyright 2020 Arkon Resources, Inc.