


Includes:

1 - RoadVise® Clamp with 38mm Ball (CPM38)

1

Attaching the Clamp to a Shaft


Begin by loosening the knob to allow the 38mm ball to insert into the shaft arm. You can do this by turning it counterclockwise. Once the shaft is in place, use the knob to tighten it by turning it clockwise.

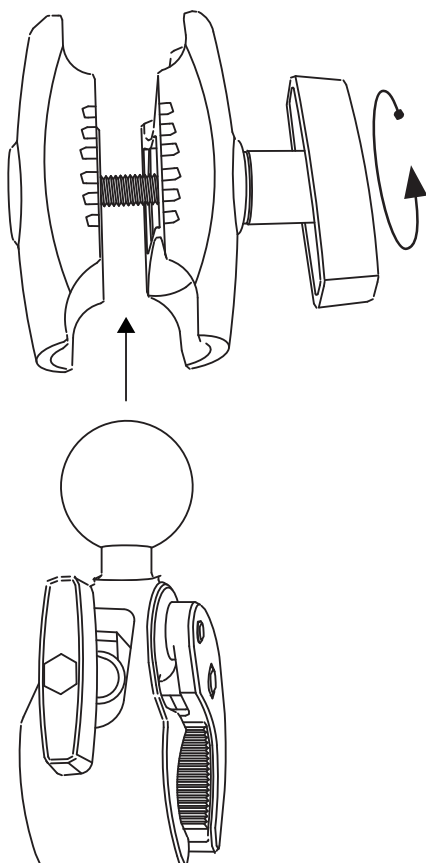

2

How to adjust the RoadVise clamp mount

Turn the knob on the clamp mount counterclockwise to expand the clamp arms to your desired width. Expand the arms by gently pulling them apart. Mount to your application surface and tighten the knob clockwise to secure.

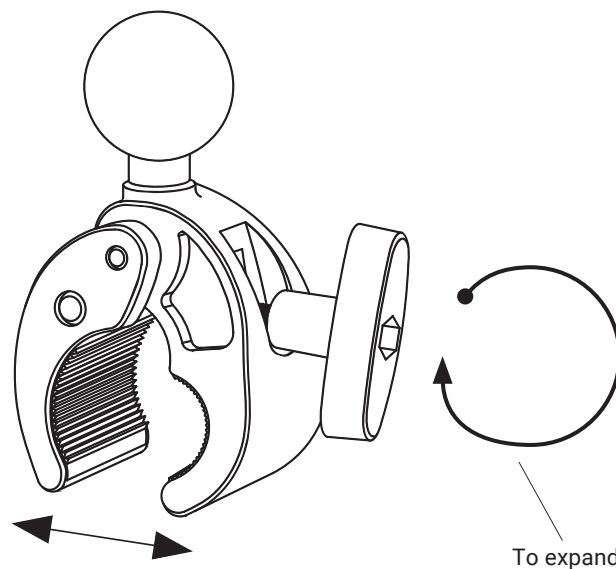

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

