

Includes:



- 1 – Manual
- 1 – 4-Hole AMPS to 38mm Ball Adapter (APAMPS38MM)
- 1 – 38mm Double Socket 5.75" Shaft Arm (SPRM3850)
- 1 – 38mm RoadVise Clamp Mount (CPM38)

Note: screws are not included in the packaging for this product.

Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installing the mounting hardware.

- 1 Assemble all the components**
Locate the packaging containing the RoadVise clamp mount, shaft arm, and 38mm ball adapter. Once located, turn the knob counterclockwise on the Double Socket Shaft Arm to create space. Insert the RoadVise Clamp Mount and 38mm Ball Adapter, then tighten it by turning it clockwise.

- 2 How to adjust the RoadVise clamp mount**
Turn the knob on the clamp mount counterclockwise to expand the clamp arms to your desired width. Expand the arms by gently pulling them apart. Mount to your application surface and tighten the knob clockwise to secure.

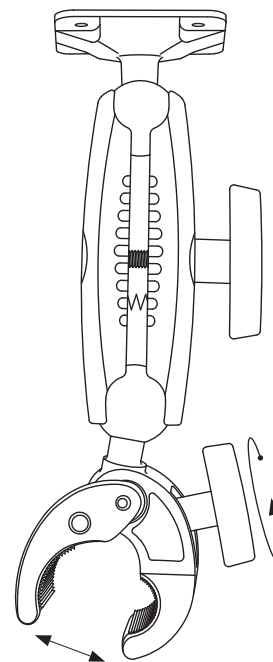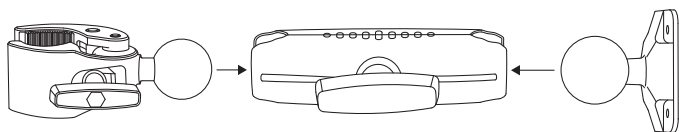

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

