
## KN8825MMHD | RoadVise® Ultra Phone Holder with 18" Aluminum Gooseneck Seat Rail Mount

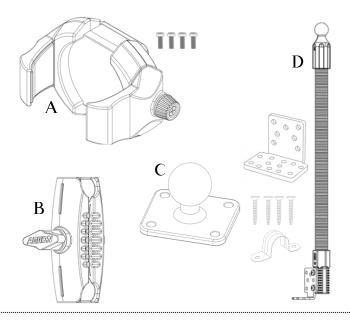

## **Included Components:**

- A. 1x RoadVise® Ultra Holder with Hardware (RVKNAMPS)
- B. 1x Robust™ Series 3.75" Shaft Arm (SP-RM250)
- C. 1x Metal AMPS to 25mm Ball Adapter (APMAMPS25MM)
- D. 1x 18-inch Gooseneck Aluminum Seat Rail Pedestal (RMH08825MM)

**Important:** Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

#### **Hardware Specifications**

x 18-8 Stainless Steel, M4.2 Screw Size 25mm Long

If you need a replacement part, please refer to the SKU options below:


- Metal Conduit: SPCONDUIT
- Floor Bracket: SPSRBRACKET

**Note:** Avoid over-tightening the knob as it may harm the threads on the holder and make it challenging to adjust.



## Attach the AMPS adapter to the holder


Position the AMPS adapter so that it aligns with the holes at the back of the holder. Utilize the provided screws to secure it in place within the holder.

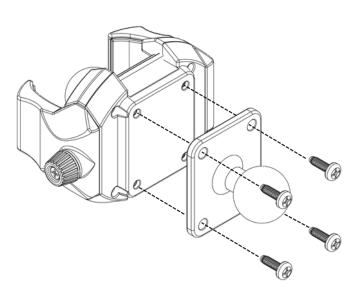

# 2

### Assemble the components

Turn the shaft arm counterclockwise to loosen it. Next, attach the 25mm ball to both ends. Finally, tighten the shaft to secure everything in place.

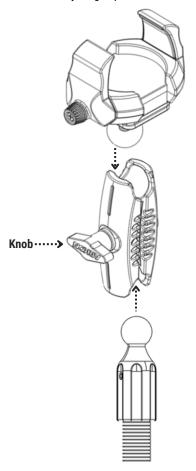

#### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

#### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that intefere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2



arko Desi ©Ark


arkon.com Designed in USA ©Arkon Resources, Inc. Need assistance? Scan to email our Arkon® customer service team.





## **Seat Rail Installation Options:**

## 3

## Option 1 - Mounting to the Passenger Seat Bolt

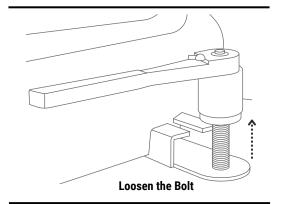

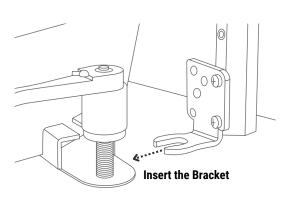


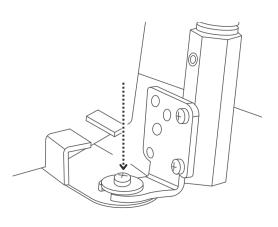



**Bracket Installed, Ready for Mount Attachment** 



## **Option 2 - Floor Mounting**

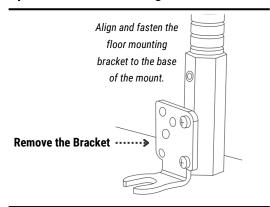

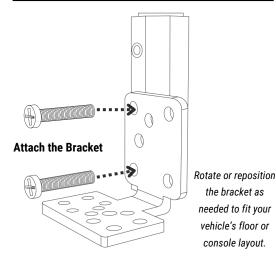

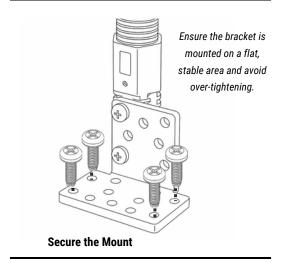

#### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

#### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that intefere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 3








## **Optional Step: Install Metal Conduit**


Attach the included metal conduit to the console to help reduce vibration and enhance stability.

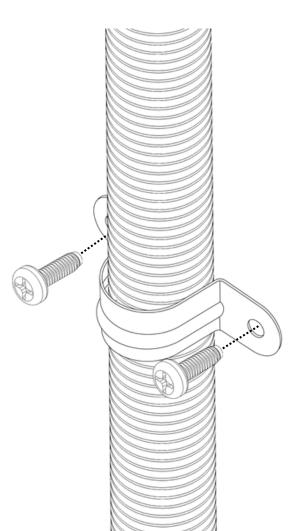



## **Final Assembly Overview**

Refer to the image below to view the complete, fully assembled setup. Ensure all components are secure and properly aligned.

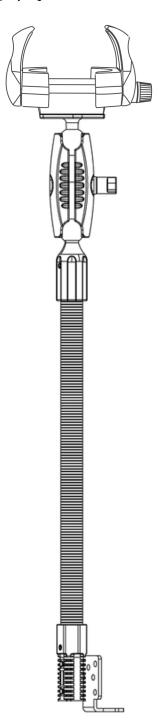

#### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that intefere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product. Continued on page 4





Designed in USA ©Arkon Resources, Inc.





## **Phone Holder Installation Steps:**




## **Install Paddings or Adhesive Strips**


Use foam paddings for non-MagSafe chargers. For MagSafe, apply adhesive strips (a) on the sides. For newer MagSafe pucks, use adhesive pad (b) with the thin foam for better magnetic contact.



### **Extend the Spring-Load Mechanism**

Rotate the center knob to lock the non-spring arm for larger devices. Use the adjustment knob to align your phone's magnetic surface for optimal charging contact.

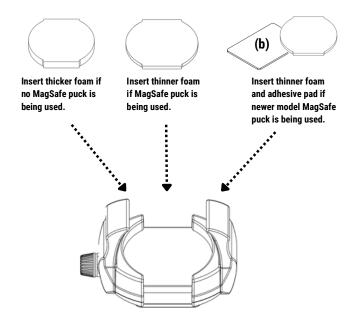


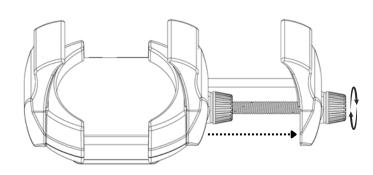



### **Install the Device**

Expand the spring-loaded arm, center your device in the holder, then release the arm to secure it firmly.

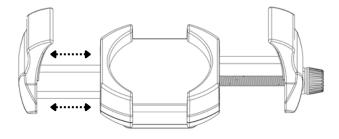

#### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

#### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that intefere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.





