



1 Attach the Robust shaft to the AMPS adapter. Screw down the 4-Hole AMPS base to flat surface with 4 screws (not included).

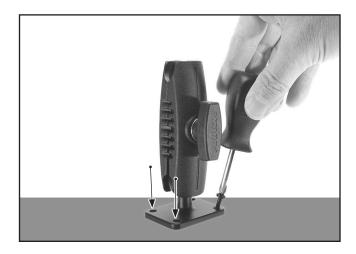

3 Loosen knob on holder to set device width.

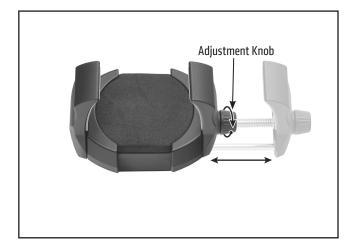

### **Package Contents:**


- (1) RVKNAMPS RoadVise® Ultra Phone and Tablet Mount
- (1) SP-RM250 Robust Mount Shaft Arm
- (2) APMAMPS25MM Metal 25mm Ball to 4-Hole AMPS Adpater

**IMPORTANT:** Do not overtighten knob. Overtightening knob may damage threads on holder and also make it difficult to adjust holder.


### **Device Compatibility:**

Arkon's RVKNAMPS RoadVise® Ultra holder fits devices with cases measuring 2.52 to 5.71 inches (64 to 145mm) wide. It features a cavity specially designed for use with the Apple MagSafe® Charger and other similar Qi wireless charging solutions. Use the adjustment knob on the end of the holder to set the width for your device.

2 Screw APMAMPS25MM adapter onto the back of the RoadVise holder. Then place holder on shaft arm by loosening knob.

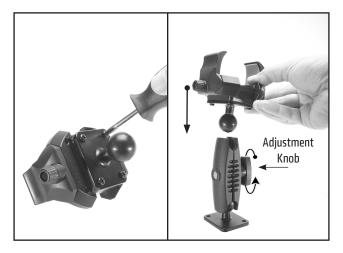

4 Using two hands, insert device into the holder by pushing the device into the SPRING-LOADED end of the holder until it lays flat against the inside of the holder. DO NOT insert device by pushing against the knob side of the holder.

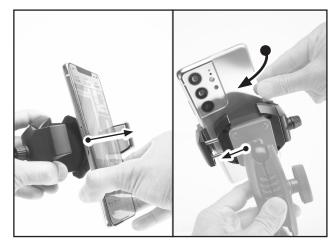

## $\triangle$

#### **Safety Precautions**

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.



Drilling into the dash, floor, or console may damage the vehicle. Use caution and consult a mobile install professional to avoid drilling into the gas tank, electrical system, or other highly sensitive vehicle components.

# **ARKON'MOUNTS**

Consumer Hotline: **USA** (800) 841-0884 **INT'L** (626) 254-9005 Monday - Friday 9am - 5pm, PST

www.arkon.com
Arcadia, CA 91006 USA
Designed in USA | Made in USA
© Copyright 2022 Arkon Resources, Inc.