

## Includes:

- 1 - RoadVise® Ultra Phone Holder Kit (RVKNAMPS)
- 2 - Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)
- 1 - OCTO™ Series 2.5" Ratchet Elbow Arm (SPRM8RTE)
- 2 - OCTO™ Series 25mm Ball with Octagon Button Arm (SPRM8SKT)

**Important:** Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

**Note:** Avoid over-tightening the knob as it may harm the threads on the holder and make it challenging to adjust.

**Compatibility:** This holder is suitable for smartphones with cases measuring up to 5.71" wide.


## Please note the RVKNAMPS hardware specifications:

- 1 - 4 pk of M4 x 12mm Screws
- 2 - 3M Adhesive Strips
- 2 - Foam Pads

### 1

#### Attach the AMPS adapter to the holder


Position the AMPS adapter so that it aligns with the holes at the back of the holder. Utilize the provided screws to secure it in place within the holder.

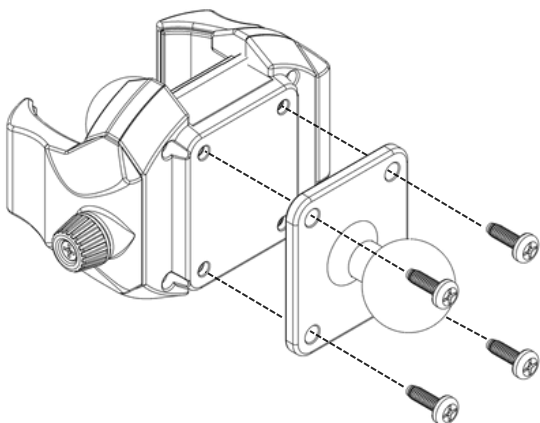

### 3

#### Fully assembled


Refer to the image below for the full assembled product.

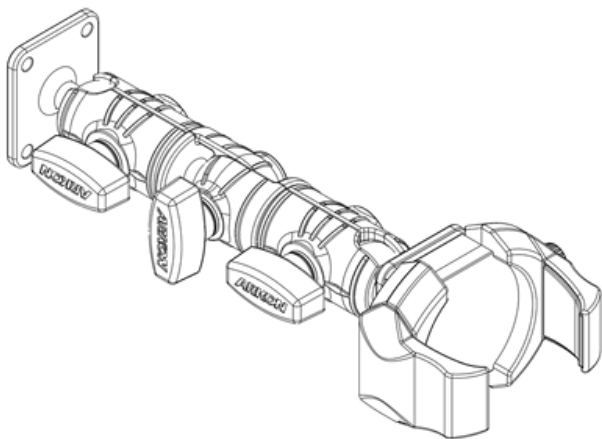

### 2

#### Assemble the components


Locate the assembled arm and rotate both end knobs counterclockwise to loosen them. Next, attach the 25mm ball to each end. Finally, tighten the knobs to ensure that everything is securely in place.

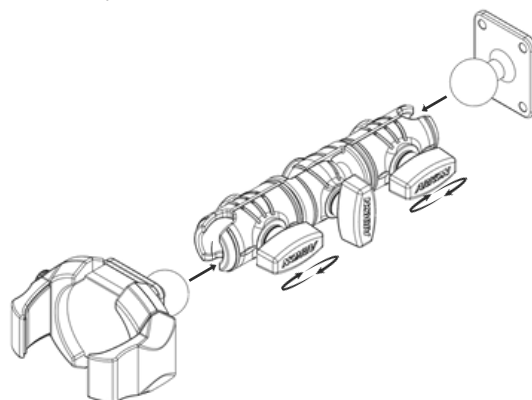

### 4

#### Install the foam paddings or adhesive strips

For non-MagSafe chargers, use the included foam paddings for a secure fit in the holder. For MagSafe chargers, apply the adhesive strips on the sides of charger for a secure hold.

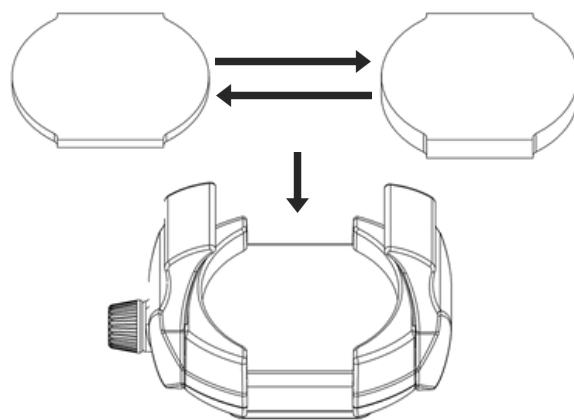

## WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

## WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2



5

## Mount Installation


Securely attach the pedestal to a mounting surface using hardware (**not included**).

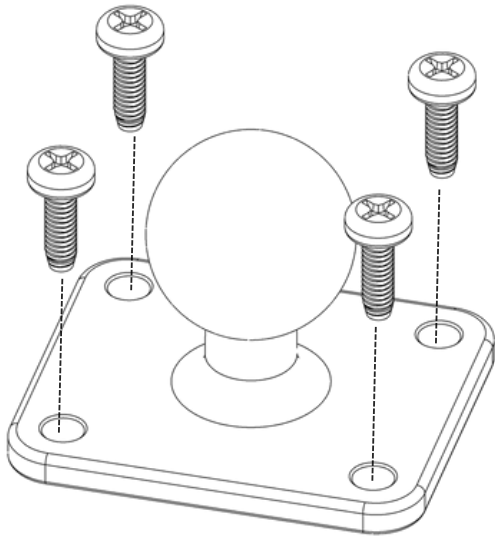

6

## Modify the Holder


To accommodate larger devices, simply rotate the center knob on the holder. This action will securely lock the non-spring loaded arm in place, providing stable support for your device.

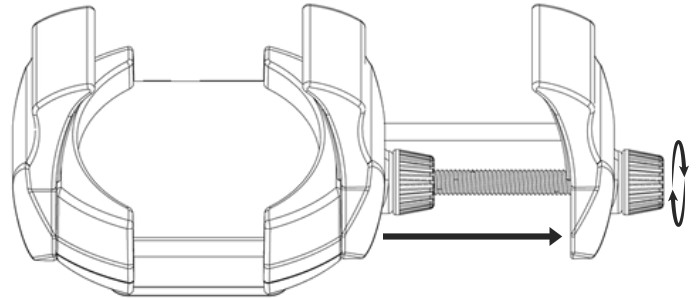

7

## Install the device

To install your device in the holder, fully expand the spring-loaded arm to create space. Gently insert your smartphone or tablet, ensuring it is centered. Then, slowly release the arm to grip your device securely.

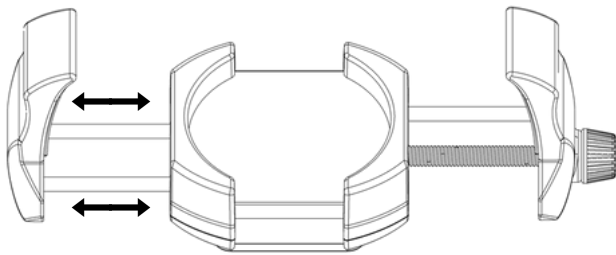

## WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

## WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

