

## Included Components:

- A. 1x RoadVise® Ultra Holder with Hardware (RVKNAMPS)
- B. 1x OCTO™ Series Double Socket Arm (SPRMSWA)
- C. 1x Metal AMPS to 25mm Ball Adapter (APMAMPS25MM)
- D. 1x Suction Cup Base with AMPS Pattern (SP080AMPSR)


**Important:** Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

**Compatibility:** This holder is suitable for smartphones with cases measuring up to 5.71" wide.

**Note:** Avoid over-tightening the knob as it may harm the threads on the holder and make it challenging to adjust.


### 1 Attach the AMPS adapter to the holder

Position the AMPS adapter so that it aligns with the holes at the back of the holder. Utilize the provided screws to secure it in place within the holder.

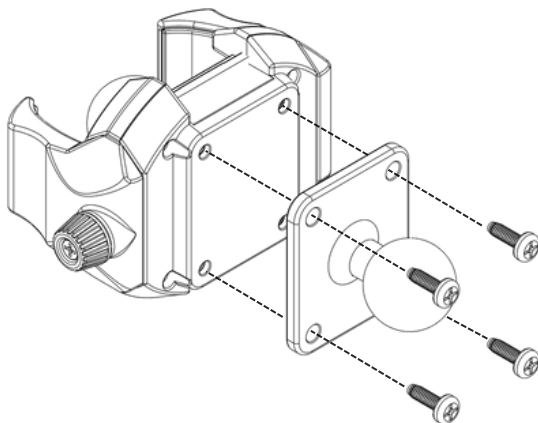


### 2 Assemble the AMPS adapter with suction base

Align the AMPS adapter plate with the holes on the suction base. Insert the four mounting screws through the plate into the base, then tighten them securely to create a stable, long-lasting connection.

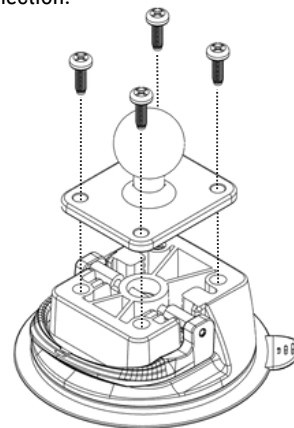


### 3 Assemble the components

Turn the shaft knobs counterclockwise to loosen it. Next, attach the 25mm ball adapters to both ends. Finally, tighten the shaft knobs to secure everything in place.

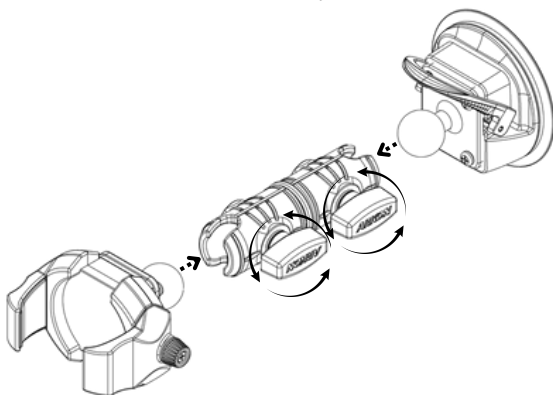

### 4 Install the Suction Cup Base

Clean a flat, smooth surface with the alcohol pad and let it dry. Remove the film, press the suction cup firmly down, and flip the lever to lock it in place.

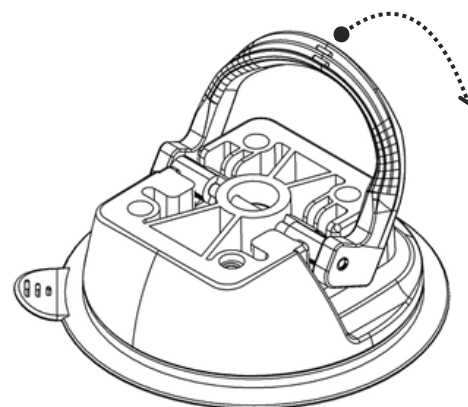

#### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

#### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2




## Phone Holder Installation Steps:

**5 Install Paddings or Adhesive Strips**


Use foam paddings for non-MagSafe chargers. For MagSafe, apply adhesive strips (a) on the sides. For newer MagSafe pucks, use adhesive pad (b) with the thin foam for better magnetic contact.

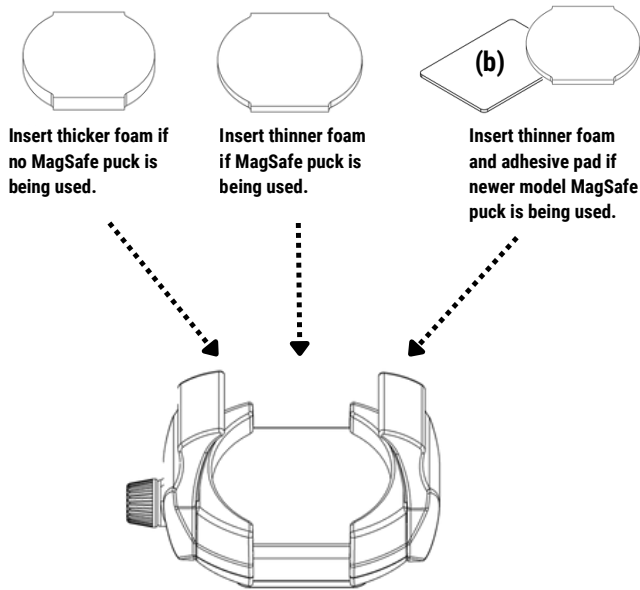**6 Extend the Spring-Load Mechanism**

Rotate the center knob to lock the non-spring arm for larger devices. Use the adjustment knob to align your phone's magnetic surface for optimal charging contact.

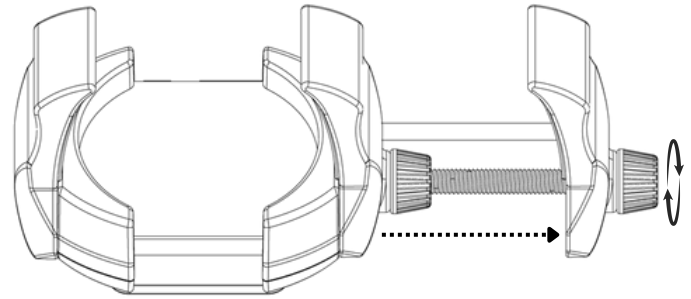**7 Install the Device**

Expand the spring-loaded arm, center your device in the holder, then release the arm to secure it firmly.

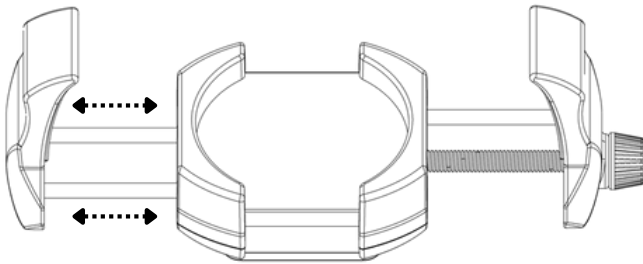**WARNING**

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

**WARNING**

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

