
RVRM1420 | Roadvise[™] Phone Tripod Mount

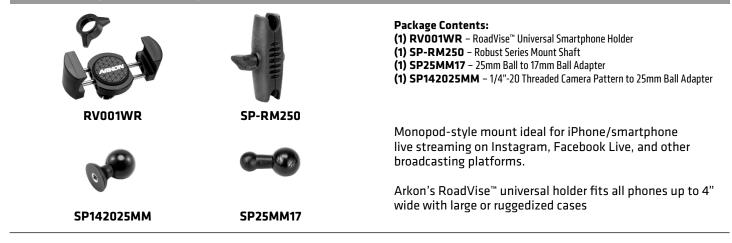


Use Mount in 1 of 3 Ways:

Mount can be handheld, or attached to a tripod or monopod by simply screwing it onto the tripod or monopod's 1/4"-20 mounting bolt:

1. Handheld Use


2. Use with Tripod


3. Use with Monopod

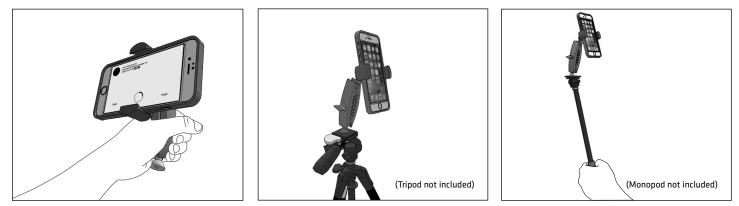

Inserting Phone:

Using two hands, insert phone into the holder by pushing the device into one of the spring-loaded legs. Expand the other leg and fully insert device until it lays flat against the blue rubber pad.

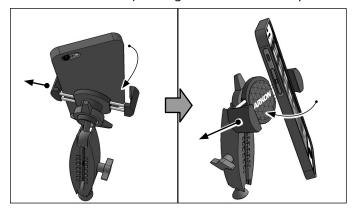

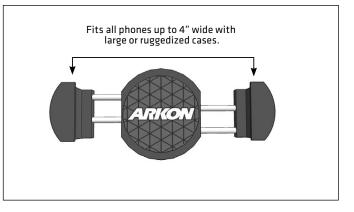

ARKON[®] MOUN



Safety Precautions

Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.



www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in USA © Copyright 2020 Arkon Resources, Inc.