



**Package Contents:**


- (1) RV001WR-B - RoadVise® Universal Smartphone Holder
- (1) SP-RM250 - Robust Mount Shaft - 3.75" 25mm (1 inch) Ball Compatible
- (1) SP1420MAG25 - Magnetic Base with 25mm (1 inch) Ball Adapter
- (1) SP25MM17 - 25mm Ball to 17mm Ball Adapter

**IMPORTANT:** Do not overtighten ring. Overtightening ring may damage threads on holder and make it difficult to adjust holder.


**Device Compatibility:**

Fits devices measuring up to 4" wide.


- 1 Attach pedestal to the metal mounting surface through the magnetic base.

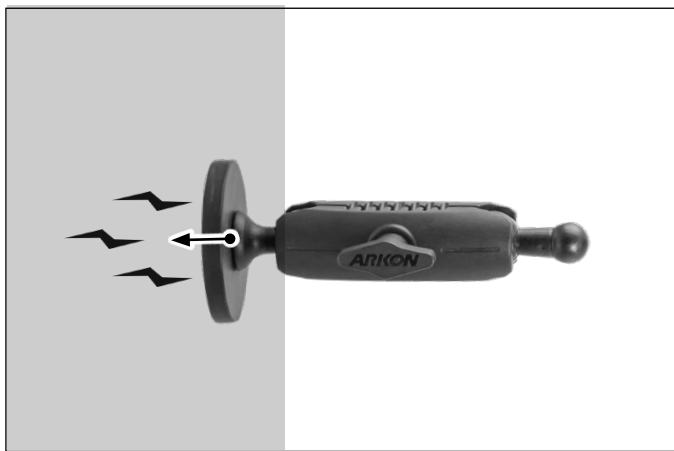


- 2 Unscrew tightening ring from RoadVise holder. Place adjustment ring over 17mm ball end of mount then snap the RoadVise Universal Smartphone holder onto 17mm ball and tighten ring. Set to desired position.

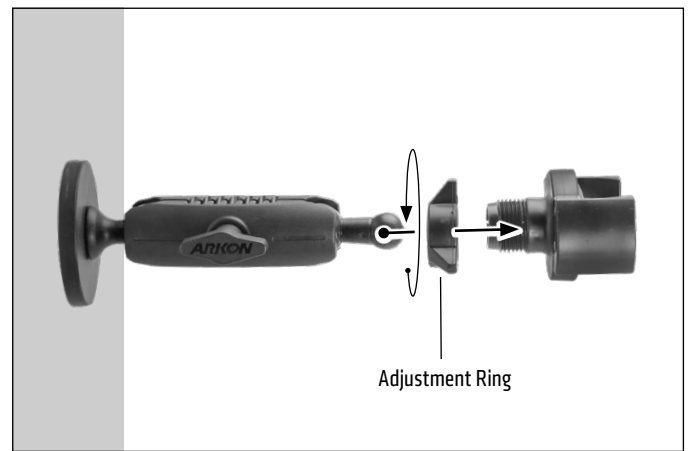

- 3 Using two hands, insert phone into the holder by pushing the device into one of the spring-loaded legs. Expand the other leg and fully insert device until it lays flat against the blue rubber pad. Rotate or adjust angle as needed.

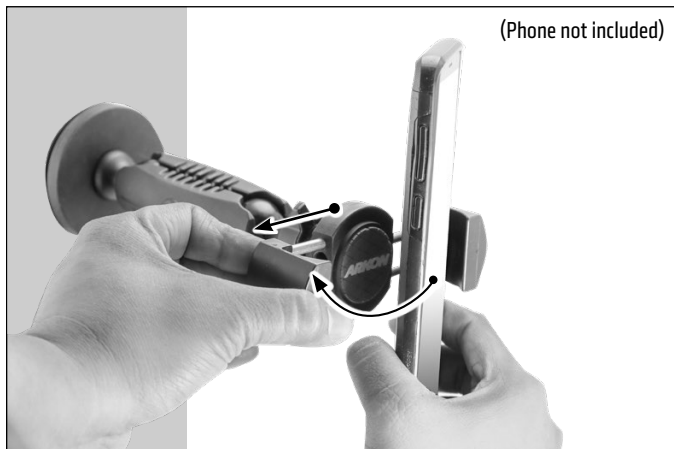

- 4 Loosen adjustment knob to adjust position. Retighten to set.

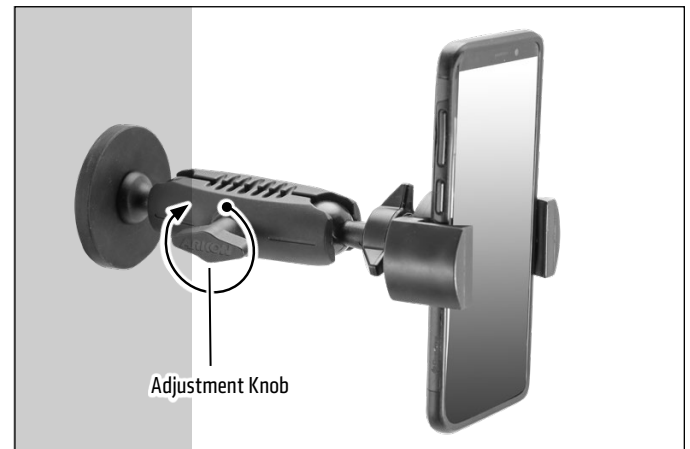

**! Safety Precautions**  
 Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount. Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

**ARKON MOUNTS**  
**Consumer Hotline:**  
 USA (800) 841-0884  
 INT'L (626) 254-9005  
 Monday - Friday 9 am - 5 pm, PST  
[www.arkon.com](http://www.arkon.com)  
 Arcadia, CA 91006 USA  
 Designed in USA | Made in Taiwan and USA  
 © Copyright 2020 Arkon Resources, Inc.