



**Package Contents:**


- (1) SP-VHB25MM – Flexible VHB Adhesive Base to 25mm (1 inch) Ball Adapter
- (1) RV001WR – RoadVise™ Universal Smartphone Holder
- (1) SP-RM250 – Robust Mount Shaft
- (1) SP25MM17 – 25mm Ball to 17mm Ball Adapter
- (1) Alcohol Pad

**Compatibility:**


Fits smartphones with cases weighing up to 2 pounds and measuring up to 4" wide.

**WARNING:** Use caution and discretion when adhering RVRMVHB to your dashboard or other surface. This disk uses 3M VHB adhesive, which is designed to be a PERMANENT solution. Use of this disk may result in permanent adherence to the selected surface. Professional strength solvents or tools may be helpful in removing the adhesive. Arkon is not responsible for any damage caused to your vehicle or other surface due to the installation of this mounting disk.


- 1 Combine VHB adhesive base and adapter to Robust mount shaft. Place adjustment ring over the adapter and snap the holder onto the adapter. Tighten adjustment ring to secure.

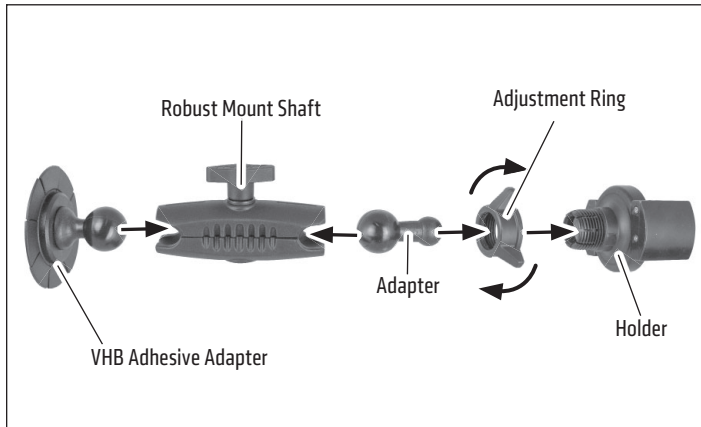

- 2 Choose a suitable location for mount pedestal installation. Clean the dashboard surface area thoroughly with the included alcohol pad, ensuring mounting area is clean and free of any dashboard conditioners or other treatments. Allow the area to dry completely before applying the mount.

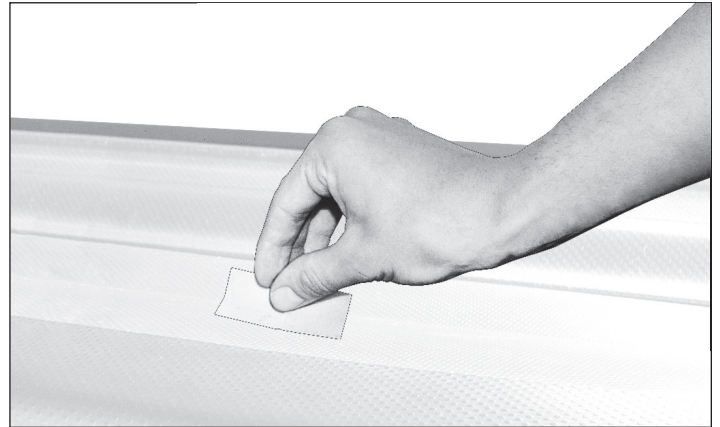

- 3 Remove the red paper backing of the base and place on the cleaned surface. Press down firmly in order to create adhesive contact and bond strength with the surface. Allow 24 hours for the adhesive to cure to the surface before applying any pressure.

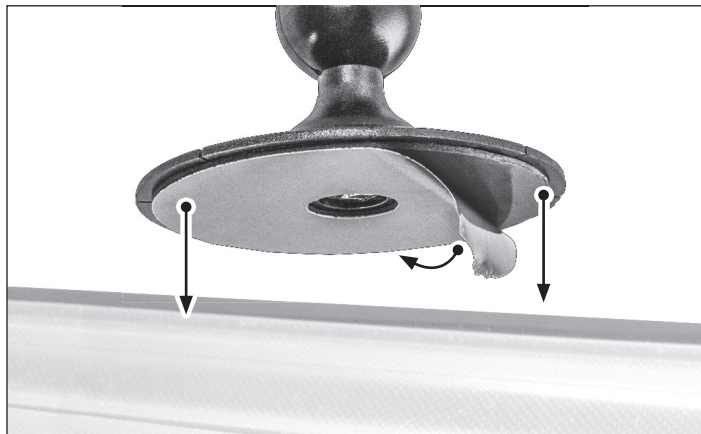

- 4 Using two hands, insert phone into the holder by pushing the device into one of the spring-loaded support arms. Expand the other support arm and fully insert device until it lays flat against the blue rubber pad.



**⚠ Safety Precautions**  
Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this mount.

**ARKON MOUNTS**

**Consumer Hotline:**  
**USA** (800) 841-0884  
**INT'L** (626) 254-9005  
 Monday - Friday 9 am - 5 pm, PST

**www.arkon.com**  
 Arcadia, CA 91006 USA  
 Designed in USA | Made in Taiwan and USA  
 © Copyright 2021 Arkon Resources, Inc.