




SM015-2SLM
Mini Grip
Universal Phone Holder

Package Contents:


(1) SM015-2SLM - Mini Grip Universal Phone Holder

No tools required for installation.

 Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.


Universal Holder Attachment


Step 1. Attach the Mini Grip holder to a Dual-T mount (not included, sold separately) by inserting the Dual T-Tabs(A) into the Dual T-Slots(B) on the holder back.

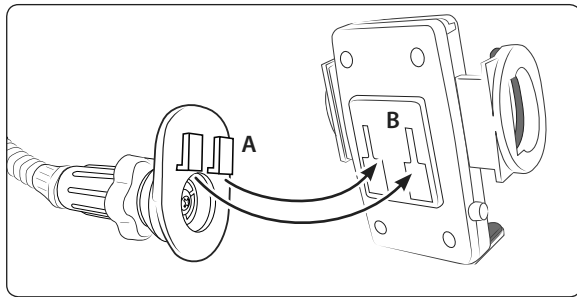

Device Insertion and Removal from Holder

Step 1. Place the phone or device (not included, sold separately) into the holder with the device sitting on the adjustable support legs (C). Clamp the grip arms (D) inward to firmly grasp the device. Press the release button (E) to open the arms.

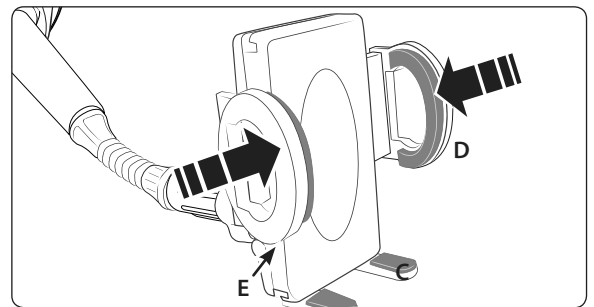

 **Safety Precautions**
Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and /or air bag deployment.
Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC. The Mobile Mounting Specialists™

Consumer Hotline: www.arkon.com
 USA (800) 841-0884
 INT'L (626) 254-9005
 Monday - Friday 9 am - 5 pm, PST
 Arcadia, CA 91006 USA
 Designed in USA | Made in Taiwan
 © Copyright 2014 Arkon Resources, Inc.