



SM48825MMHD | Mega Grip™ Universal Phone Holder with 18" Seat Rail Mount

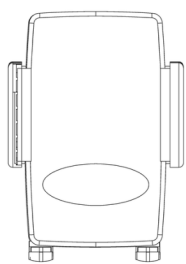


SM040-2



APRM2T

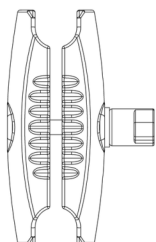

SP-RM250



RMH08825MM


Includes:

- 1 – Mega Grip™ Universal Phone Holder Kit (SM040-2)
- 1 – 25mm ball to Dual T-Tab Mounting Pattern Adapter (APRM2T)
- 1 – Robust™ Series 3.75 inch Shaft Arm (SP-RM250)
- 1 – Seat Rail Floor Mount Pedestal Kit (RMH08825MM)

Compatibility: This holder is suitable for smartphones with cases measuring up to 3.50" wide.


1 Install the Dual T-Tab Adapter into the Phone Holder

Install the Dual T-Tab Adapter by inserting it into the slot located behind the holder. Then, slide the adapter upwards to ensure it is securely in place.

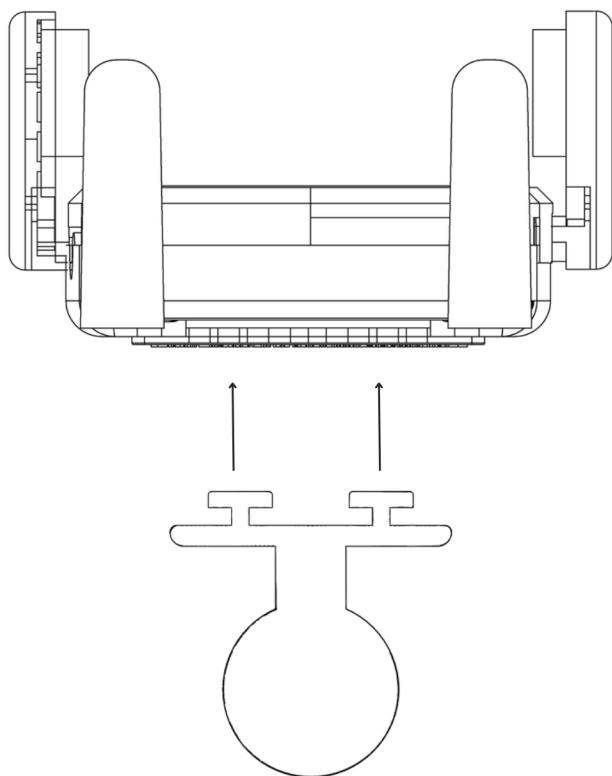

2 Assemble the components

Turn the shaft arm counterclockwise to loosen it. Next, attach the 25mm ball adapters to both ends. Finally, tighten the shaft to secure everything in place.

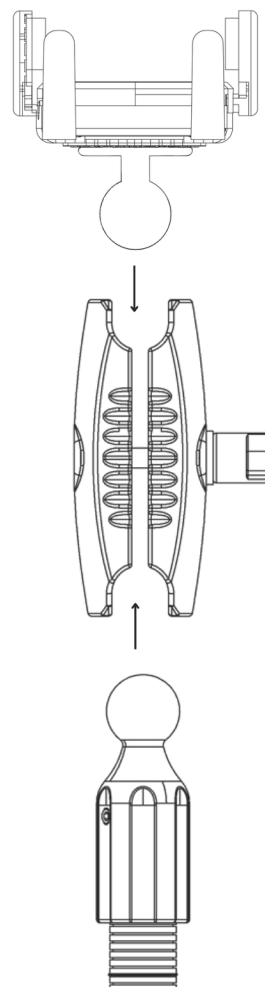

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2

ARKON® MOUNTS

USA (800) 841-0884
INT'L (626) 254-9005
Monday - Friday 9 am - 5 pm PST




arkon.com
Designed in USA
©Arkon Resources, Inc.

Need assistance?
Scan to email our
Arkon® customer
service team.





3 Option 1 - Mounting the Passenger Seat Bolt

Utilize a socket wrench to loosen the bolt on the passenger seat track. Then, insert the seat track bolt bracket. Finally, tighten the seat track bolt securely.

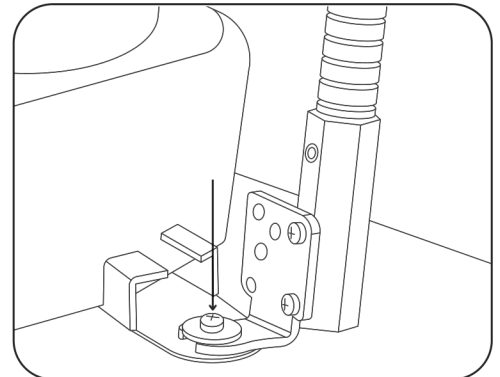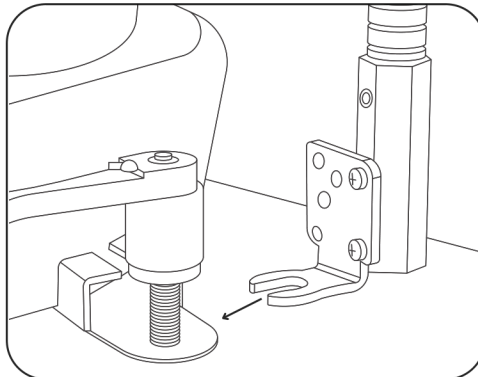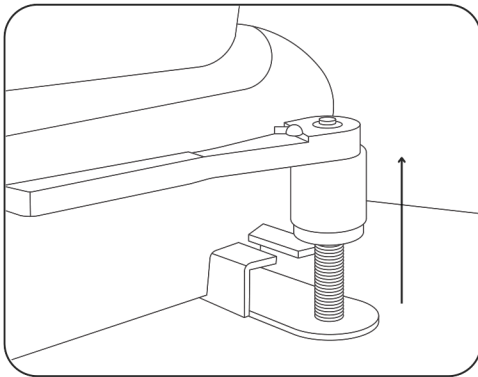


4 Option 2 - Floor Mounting

Fasten the floor bracket to the mount. (Adjust the bracket's orientation as needed for your vehicle). Secure the floor/console bracket in place using screws.

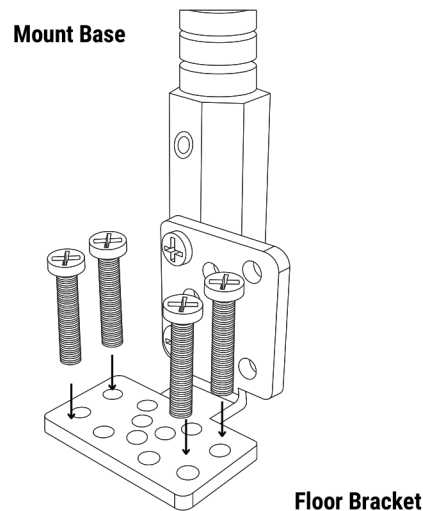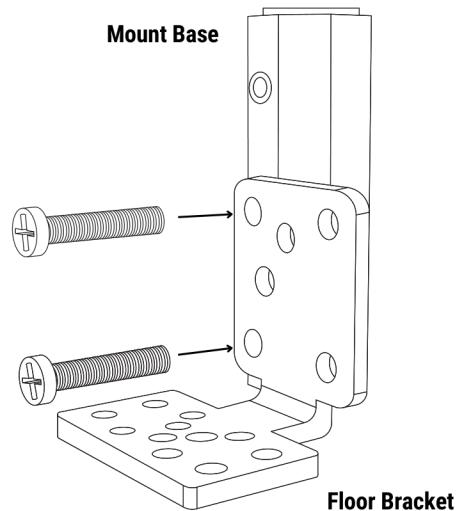

5 Optional Step: Metal Conduit

Connect the provided metal conduit to the console to reduce vibration.

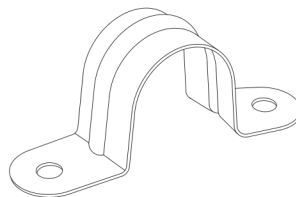

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 3



6

Install your device into the phone holder


Adjust the removable support legs by sliding them laterally on the top or bottom of the holder. Position the device on the support legs and push the arms in to secure it. To remove the device, press the release button.

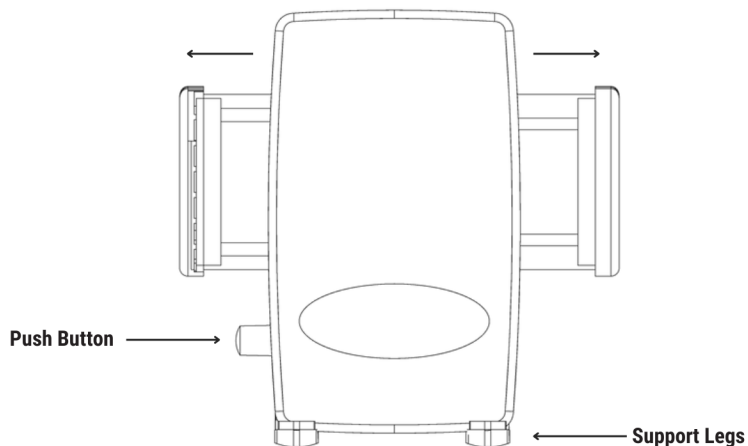

7

Fully Assembled

Refer to the image below for the full assembled product.

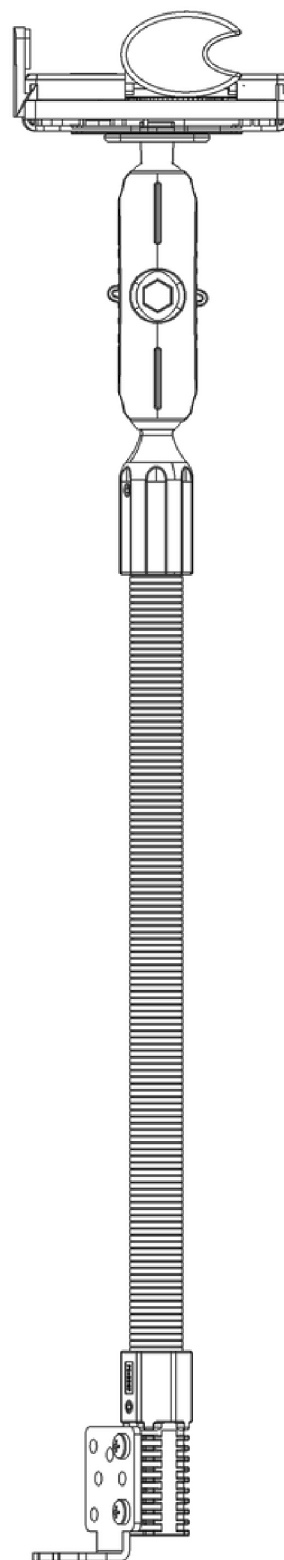

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

