



SM040AMPS

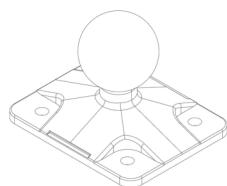

APAMPS25MM

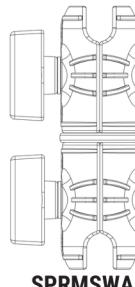

SPRMSWA

Includes:


- 1 – Mega Grip™ Phone Holder Kit - 4-Hole AMPS (SM040AMPS)
- 2 – 4-Hole AMPS to 25mm Ball Adapter (APAMPS25MM)
- 1 – OCTO™ Series 4.25 inch Double Socket Shaft Arm (SPRMSWA)

Please note that screws are not included with the drill base adapter.

Compatibility: This holder is suitable for smartphones with cases measuring up to 3.5" wide.


1 Install the AMPS Adapter Plate onto the Phone Holder

Position the AMPS adapter plate at the back of the phone holder. Insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the phone holder. Securely tighten the screws to complete the installation.

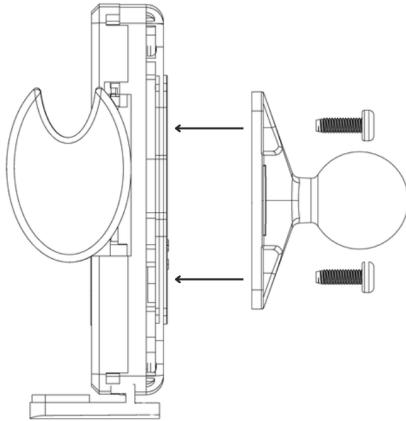


2 Assemble the components

Turn both shaft knobs counterclockwise to loosen it. Next, attach the 25mm ball adapters to both ends. Finally, tighten the shaft to secure everything in place.

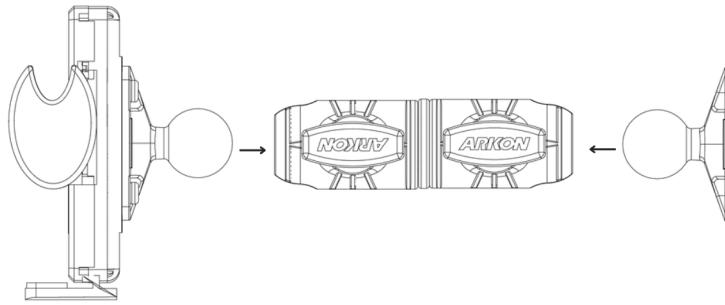


3 Fully Assembled

Refer to the image below for the full assembled product.

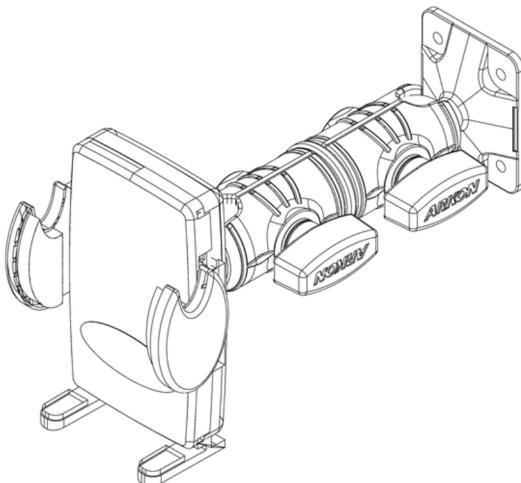

4 Install your device into the phone holder

Adjust the removable support legs by sliding them laterally on the top or bottom of the holder. Position the device on the support legs and push the arms in to secure it. To remove the device, press the release button.

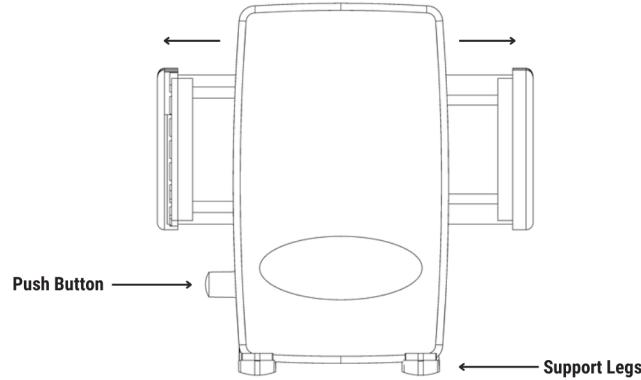

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

