



1 Place clamp on headrest and use the included hex key to securely tighten the 4 hex screws to securely mount clamp onto post.

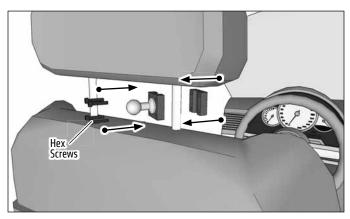

3 Attach the holder to the mount by inserting the Dual T-Tabs into the holder's Dual T-Slots and pushing down to lock. Loosen adjustment knob to set desired position of holder and retighten.

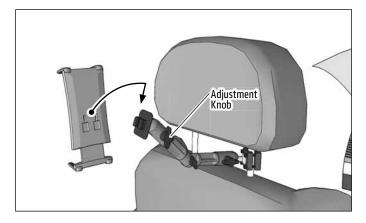

Package Contents:

HD006 – Multi-Angle Aluminum Mounting Pedestal with 8" Adjustable Arm and 4-Hole AMPS Drill Base


SM060-2 – Slim-Grip® Ultra™ Smartphone and Midsize Tablet Holder **HM004-B** – Headrest Clamp with 20mm Ball

Clamp fits .31" - .63" (8mm-16mm) diameter posts.


NOTE: Select the appropriate short or long support legs and install to holder. For large sized smartphones such as the Galaxy Note and midsize tablets, select 4 long support legs.

IMPORTANT: Clamp may not fit all headrest types. Please consult your vehicle's user manual for compatibilty.

2 Loosen the adjustment knob on the pedestal, remove the drill base, and position the pedestal over the mount's ball. Retighten knob and set pedestal to desired angle.

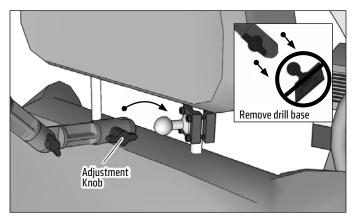

4 Insert device into holder by pushing down on the bottom springloaded support legs with the device. Slide the top of the device under the top support legs until it fits snuggly in the holder.

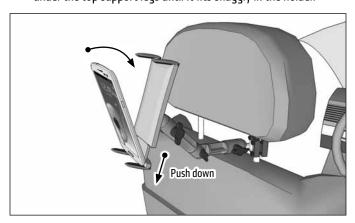



Safety Precaution

Arkon Resources, Inc. is not responsible for any damages caused to your vehicle or yourself due to the installation of this product.



The Mobile Mounting Specialists™

Consumer Hotline: USA (800) 841-0884 INT'L (626) 254-9005 Monday - Friday 9 am - 5 pm, PST www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan © Copyright 2015 Arkon Resources, Inc.