

Includes:

- 1 - LockVise™ Locking Phone Holder with Key Lock Kit (SM090)
- 1 - Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)
- 1 - Robust™ Series 3.75 inch Shaft Arm (SP-RM250)
- 1 - Seat Rail Floor Mount Pedestal Kit (RMH08825MM)

Compatibility: This holder is designed to work with a variety of phones, accommodating the most popular models with widths ranging from 4.88" to 7.18" when mounted horizontally.


Seat Rail Kit Hardware Specifications:

- 1 - Metal conduit (SPCONDUIT)
- 1 - Floor mounting bracket
- 4 - Phillips rounded heads screws (18-8 Stainless Steel, M4.2 Screw Size 25mm Long)

1

Install the AMPS adapter plate to the phone holder


Align the AMPS adapter on the back of the phone holder. Then, insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the phone holder. Finally, secure the screws tightly.

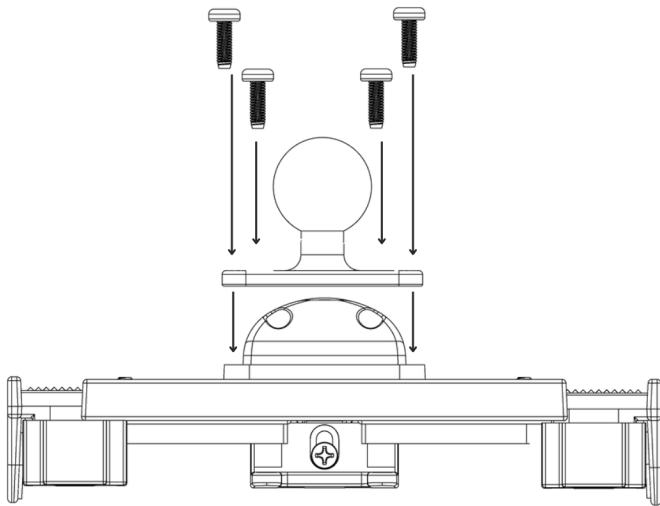

2

Assemble the components

Turn the shaft arm counterclockwise to loosen it. Next, attach the 25mm ball adapters to both ends. Finally, tighten the shaft to secure everything in place.

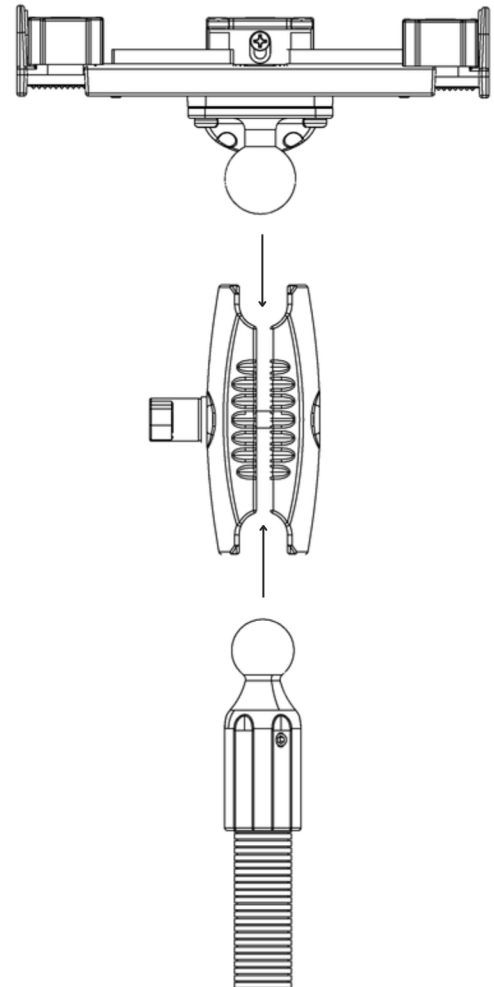

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system




WARNING

Ark® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Ark® products near areas that interfere with operation of vehicles. Ark® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Ark® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2



3 Option 1 - Mounting the Passenger Seat Bolt

Utilize a socket wrench to loosen the bolt on the passenger seat track. Then, insert the seat track bolt bracket. Finally, tighten the seat track bolt securely.

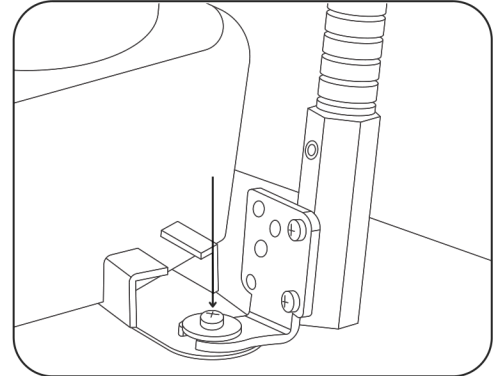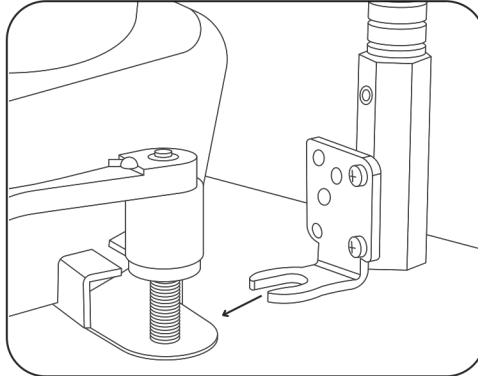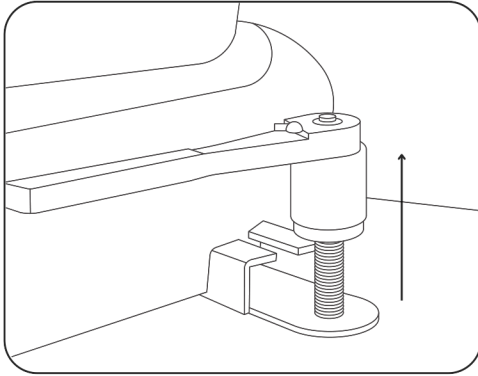


4 Option 2 - Floor Mounting

Fasten the floor bracket to the mount. (Adjust the bracket's orientation as needed for your vehicle). Secure the floor/console bracket in place using screws.

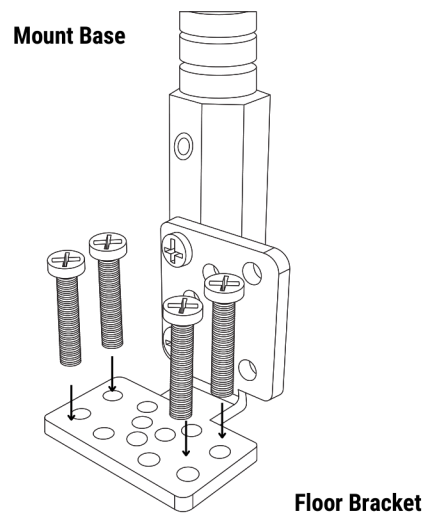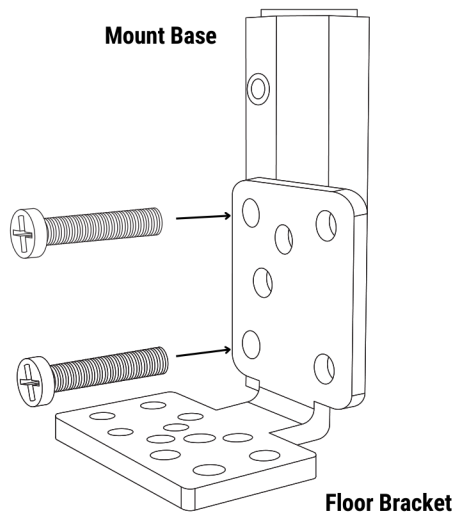

5 Optional Step: Metal Conduit

Connect the provided metal conduit to the console to reduce vibration.

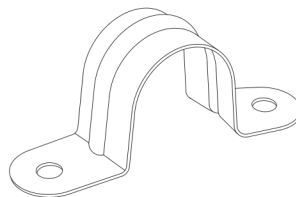

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING


Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 3




6 Optional - Installing the foam padding if not using a phone case

To properly set up the holder, find the packaging that contains the foam padding and place it on the sides of the holder.

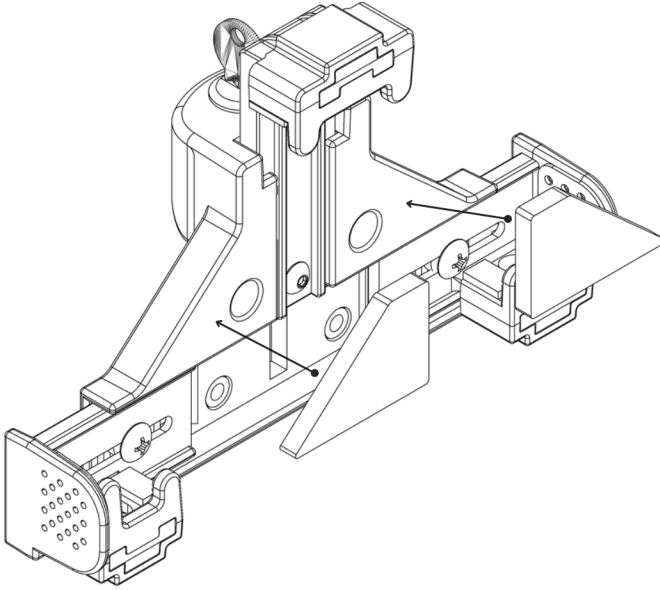


7 Adjusting the length of the holder

To adjust the holder, use a Phillips screwdriver. Loosen the screws in order to expand the width and depth of the holder.

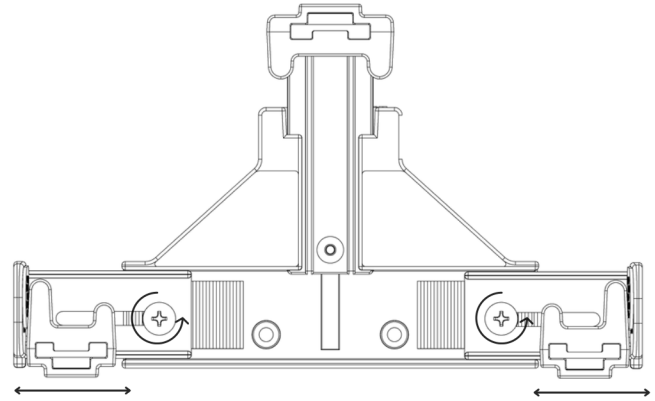

8 Installing the phone to the holder

Apply the locking keys to lock the height adjustment of the holder. Unlock the holder and pull up on the top arm to expand the holder.

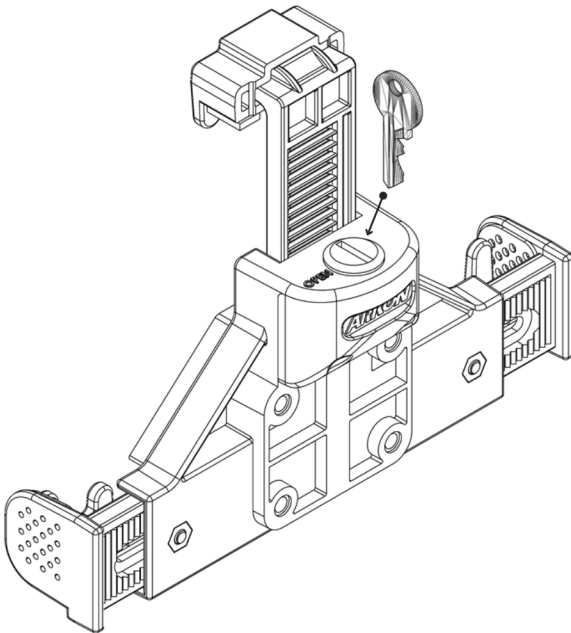

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

9 Fully Assembled

Refer to the image below for the full assembled product.

