




Package Contents:
 SP-RMSH-KIT – (1) 40mm Socket Head Screw
 (1) Zinc Nut
 (1) Allen Key

1 Unscrew the Robust knob and remove the existing bolt.



2 Replace with socket head screw/bolt.

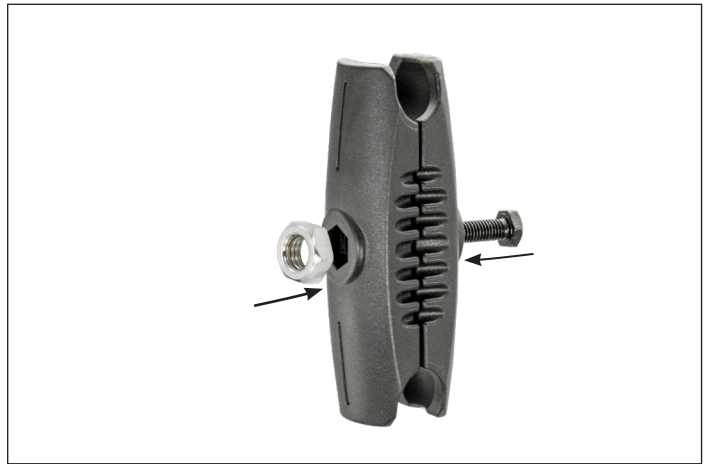

3 Tighten with Allen key hex/bit.



! Safety Precautions
 Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Mounts assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.

ARKON MOUNTS

Consumer Hotline:
 USA (800) 841-0884
 INT'L (626) 254-9005
 Monday - Friday 9am - 5pm, PST

www.arkon.com
 Arcadia, CA 91006 USA
 Designed in USA | Made in China
 © Copyright 2022 Arkon Resources, Inc.