


Package Contents:

(1) SPAMPSPLATE - Square Mounting Backer Plate with Screws and Washers

SPAMPSPLATE measures 2.6" square. Holes are pre-drilled

SPAMPSPLATE

1 Place plate on desired mounting surface. Place AMPS-compatible mount base on top of the plate. Use screws to drill through both the mount base and plate.

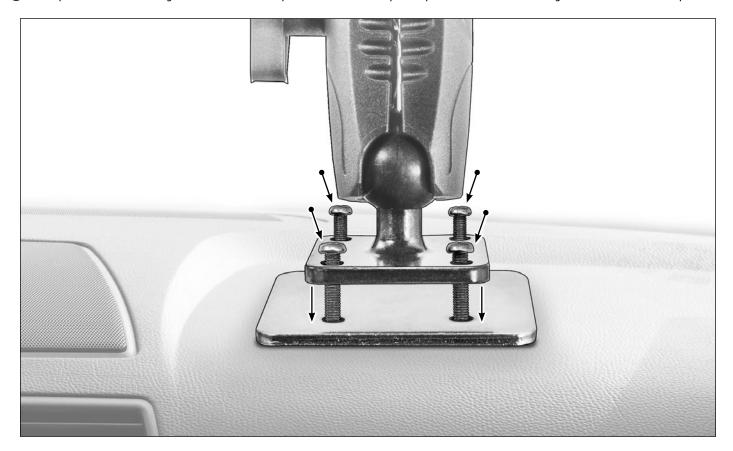



Safety Precautions
Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment. Arkon is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation of this mount.

Use caution when drilling into the vehicle. Consult a mobile install professional to avoid drilling into any sensitive vehicle components.



The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884 INT'L (626) 254-9005 Monday - Friday 9 am - 5 pm, PST

www.arkon.com Arcadia, CA 91006 USA Designed in USA | Made in Taiwan © Copyright 2016 Arkon Resources, Inc.