


Includes:

- 1 – Barcode Scanner Gun Holster Holder (SPHLSTR)
- 4 – M 4x8mm Phillips steel with black anodized
- 4 – Pads

1

Attach an AMPS adapter to the holder


Position an AMPS adapter on the rear of the holster holder, ensuring alignment. Secure the mounting pattern by utilizing the provided hardware.

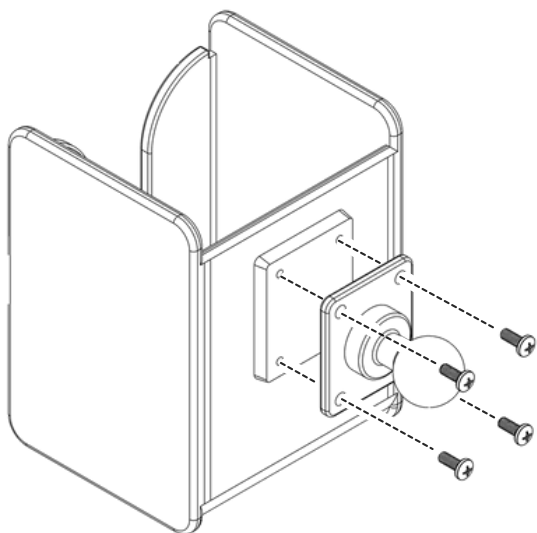

2

Install the Barcode Scanner

If there is excess space when you place the barcode scanner in the holster, please use the pads to minimize the gap and ensure a snug fit.

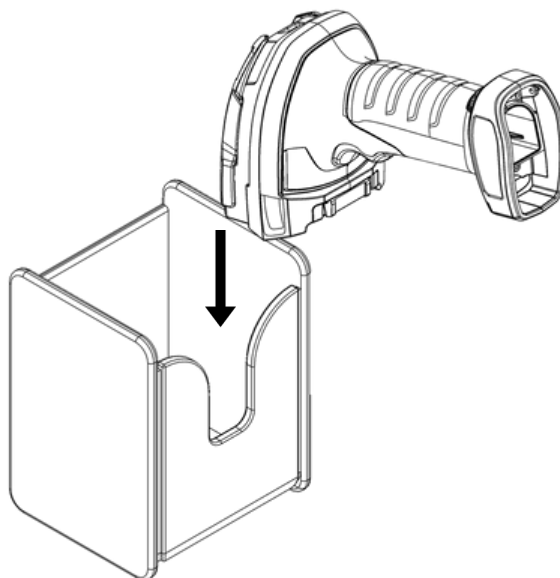

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

