




SPRMET

Package Contents:


SPRMET – Metal Robust Mount Shaft - 3.75" 25mm Ball Compatible

- 1 Attach any 25mm (1 inch) compatible base, adapter or holder (not included, sold separately) to the Robust mount shaft by loosening adjustment knob to adjust position. Retighten to set.

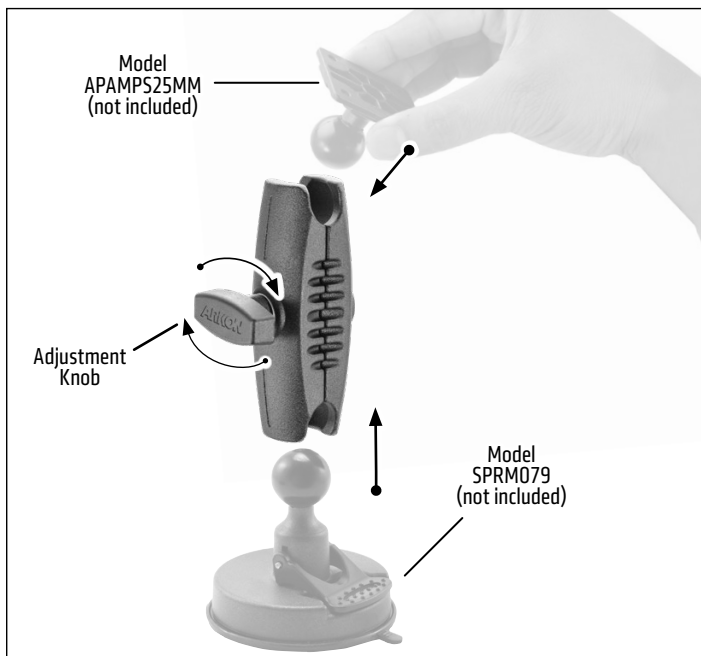

OPTIONAL: SP-RMSH-KIT Security Kit Hardware (sold separately)

To install security hardware: 1) Unscrew the adjustment knob to remove knob, washer and bolt. 2) Insert security screw and attach nut, then tighten with Allen wrench.

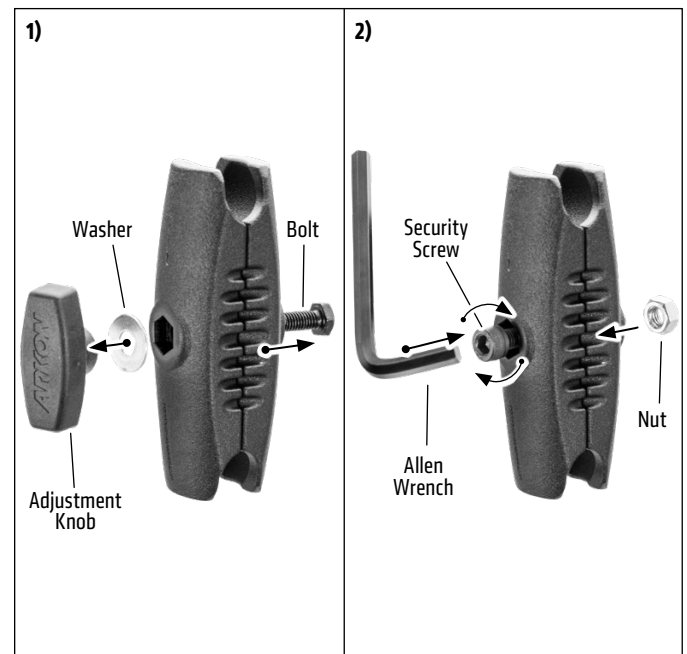

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.

ARKON MOUNTS

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in China

© Copyright 2019 Arkon Resources, Inc.