

SPRMSH38KIT


Package Contents:

- SPRMSH38KIT - (1) 5/16" - 18 Acorn Nut
- (1) 5/16" - 18 x 2" Torx Head Screw
- (1) 3/16" x 1" Torx Bit


1 Unscrew the Robust knob and remove the existing bolt.



2 Replace with socket head screw/bolt.

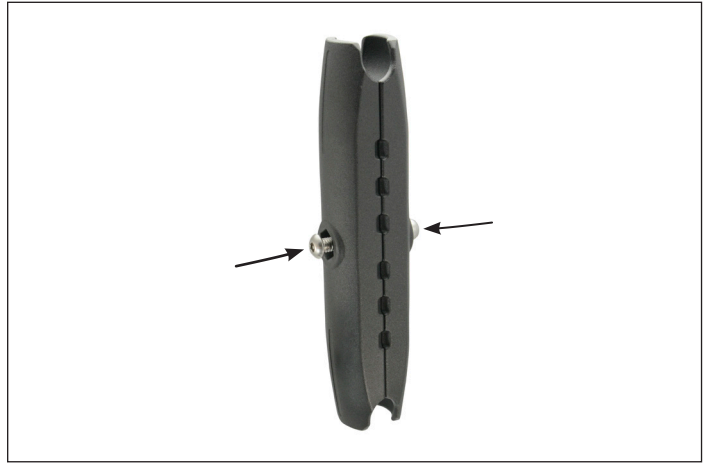

3 Tighten with Torx locking screw.

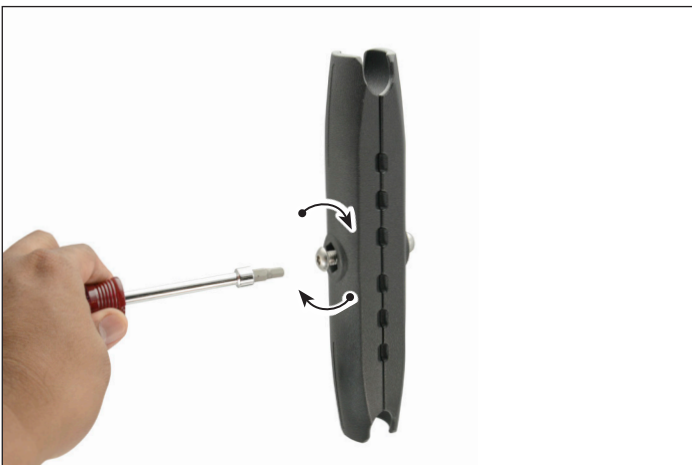

! Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Mounts assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your vehicle, your device, your passengers, or yourself due to the installation or use of this mount.

ARKON MOUNTS

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9am - 5pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in Taiwan

© Copyright 2022 Arkon Resources, Inc.