

Included Components:

- A. 1x Slim-Grip® Ultra Pro Tablet Holder with Support Legs (TAB006XL)**
- B. 1x Clamp Pedestal with 4" Arm and Dual-T Adapter (GN086-SBH)**

Tablet Size Approx.	Recommended Leg Combination
6.37" – 8.81"	2 Small Legs
7.12" – 9.25"	1 Long Leg + 1 Small Leg
7.62" – 10"	2 Long Legs
8.75" – 11.12"	1 Long Leg + 1 Extra-Long Leg


Important: Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

If you need a replacement part, please refer to the **SKU** options below:

- **Tablet Holder Support Legs:** SPTAB6FT
- **Tightening Ring & Dual-T Pattern Kit:** SP-SBH-KIT-22
- **Rubber Cover for the Clamp:** SPCLAMPCLR


1 Align and Adjust the Clamp Width

Position the clamp on the edge of the surface where you want to mount the system. The multi-hole design allows compatibility with a wide range of surfaces and setups. Adjust the screws as needed to your desired positioning.

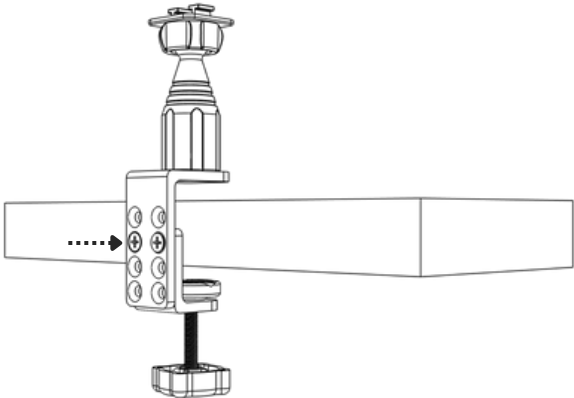


2 Secure the Clamp

Rotate the adjustment knob to open the clamp. Tighten the adjustment knob until the clamp is firmly secured to the surface. The durable clamp mechanism ensures your setup stays stable.

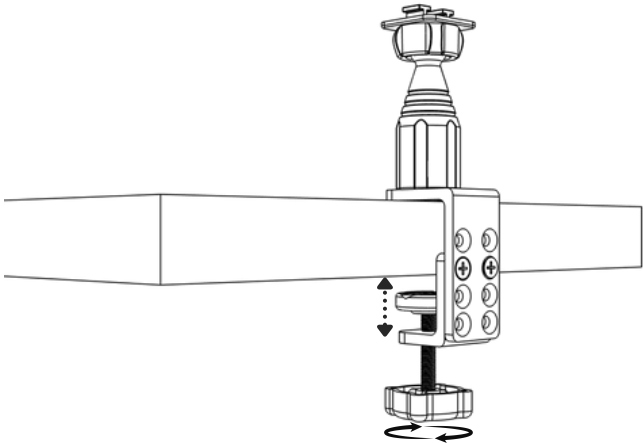

3 Dual T-Tab Adapter Installation

First locate the Dual-T slot on the back of the holder. Align the adapter with the slot and insert it carefully. Once inserted, slide the adapter upward until it is fully secured in place.

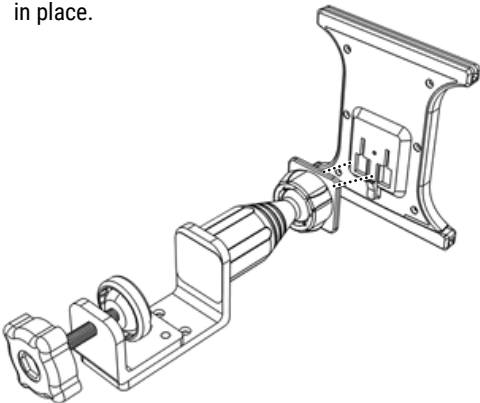

WARNING
 CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING
 Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2



4

Installing the Support Legs


Select the appropriate support legs based on the size guidelines provided on page 1. Then, insert each leg into the designated support leg channel on the holder and slide it in until it fits securely.

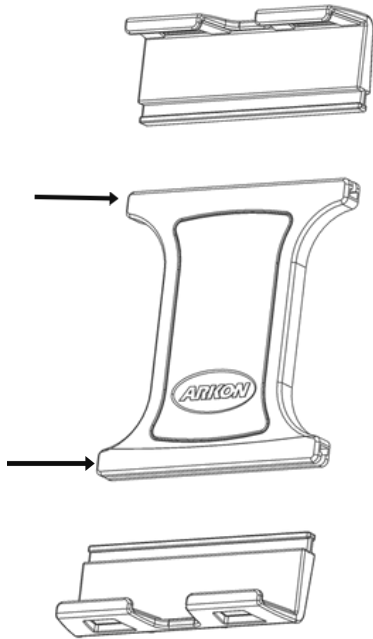

5

Extend the Spring-Load Mechanism

To extend the legs, insert one end of the tablet into the bottom support legs.

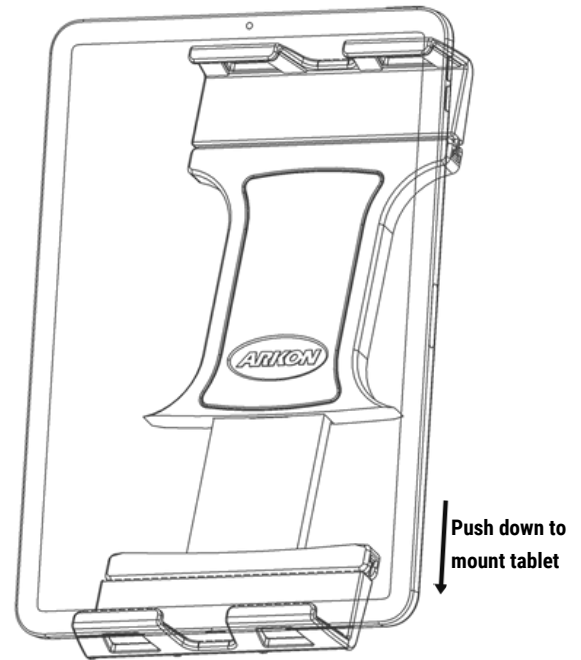

6

Install the Tablet


With the holder's spring-loaded support legs expanded, lay the tablet flat on the holder.



7

Secure Tablet

Gently release the tablet into the holder, allowing the bottom spring-loaded support legs to secure the tablet.

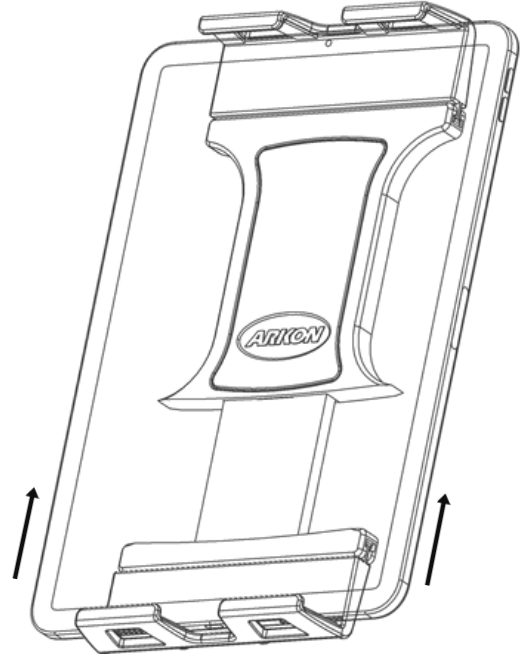

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

