

Includes:


- 1 – Slim-Grip® Universal Tablet Holder Kit (TAB001-AMPS)
- 1 – Metal 4-Hole AMPS to 38mm Ball Adapter (APMAMPS38MM)
- 1 – Robust™ Series 38mm Compatible Shaft Arm (SPRM3850B)
- 1 – Robust™ Clamp Mount with 38mm Ball (CPM38B)

IMPORTANT: Clean the application surface and make sure it is free of dirt, dust, and grease before installing the mounting hardware.


Leg selection guide

- Recommended legs to use based on tablet with or without a case
- For tablets size min 6" to 8.25" max we recommend using 4 small legs
 - For tablets size min 6.75" to 9.12" max we recommend using 2 small legs and 2 medium legs
 - For tablets size min 8.31" to 10.75" max we recommend using 2 medium legs and 2 large legs
 - For tablets size min 9.12" to 11.50" max we recommend using 4 large legs

1 **Install the AMPS adapter onto the tablet holder**
Align the adapter holes with the ones on the tablet holder. Then, securely attach the screws included in the tablet holder kit.

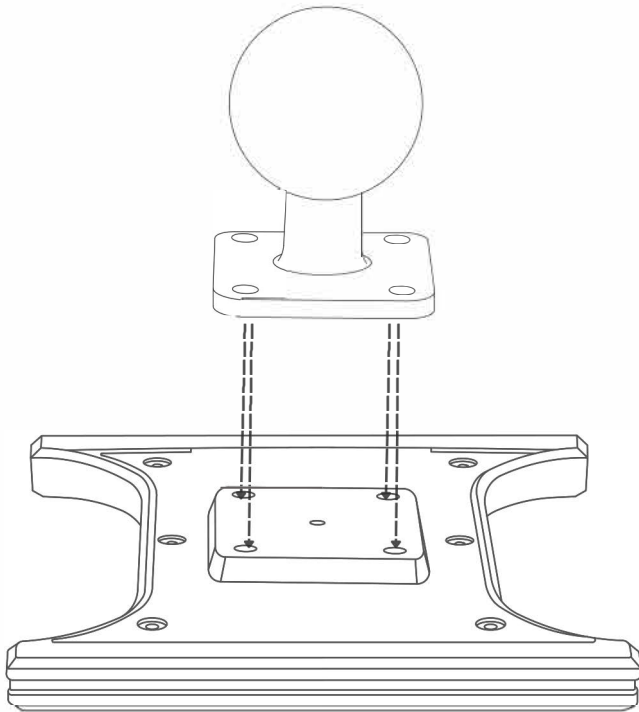

2 **Assemble all components**
Turn the shaft arm counterclockwise to loosen it. Next, attach the 38mm ball adapters to both ends. Finally, tighten the shaft to secure everything in place.

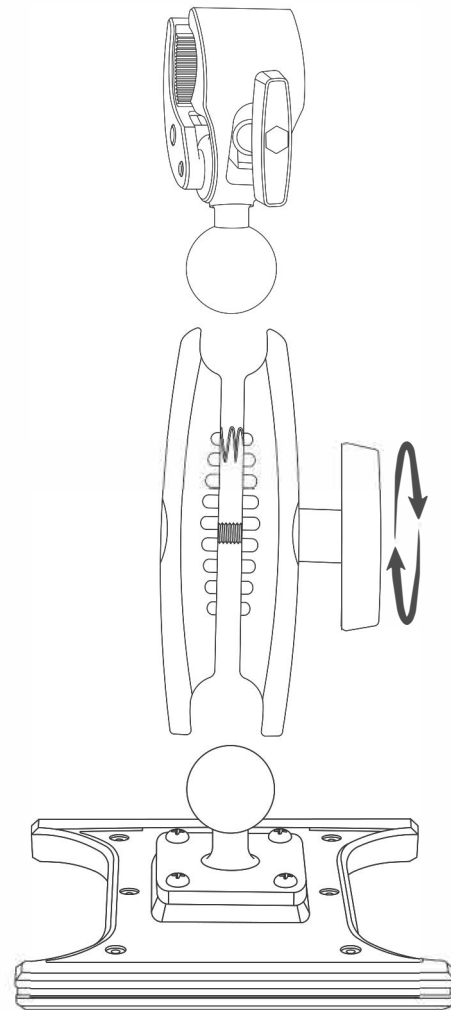

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system


WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.


Continued on page 2




- 3 Adjusting the Clamp Mount**
 To widen the clamp arms to the desired width, turn the knob counterclockwise. Attach to your desired surface and then tighten the knob clockwise to secure in place.

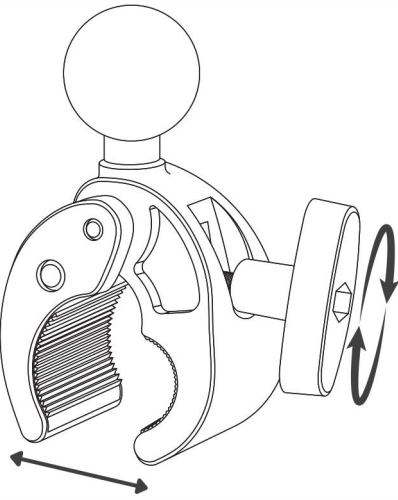


- 4 Fully Assembled**
 Refer to the image below for the full assembled product.

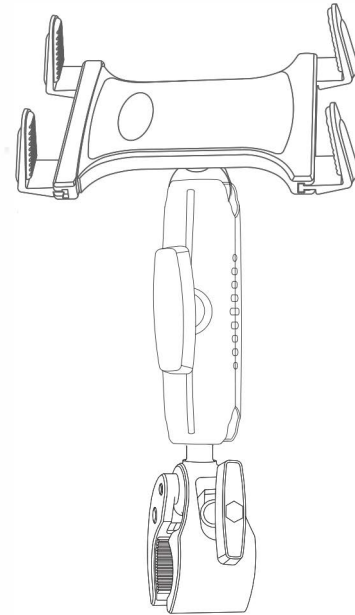

- 5 Install the legs onto the holder**
 Place the support legs as recommended. Then, insert the support legs into the designated channels on the holder.

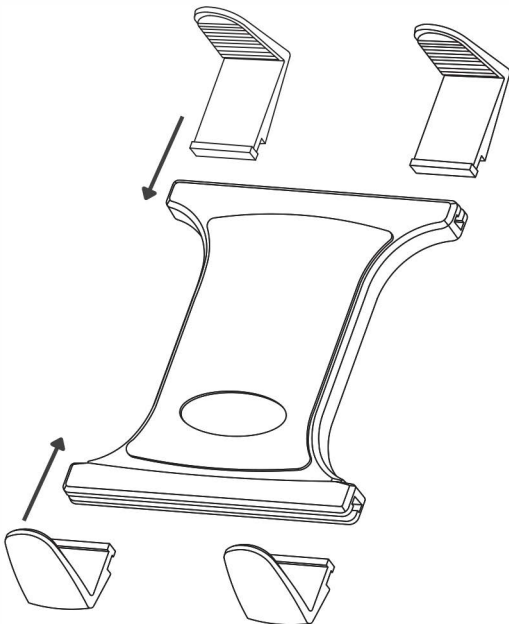

- 6 Install tablet to ensure proper fit**
 Apply downward pressure with the tablet to extend the legs using the spring-loaded mechanism. Then, confirm that the tablet fits securely in the holder without any loose movement.

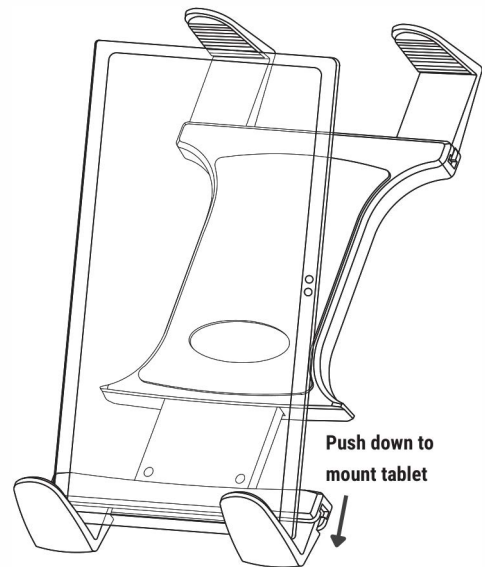

WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

