


# TAB1SWAMAMPS | Slim-Grip® Tablet Holder with Double Shaft Arm and Drill-Base Mount

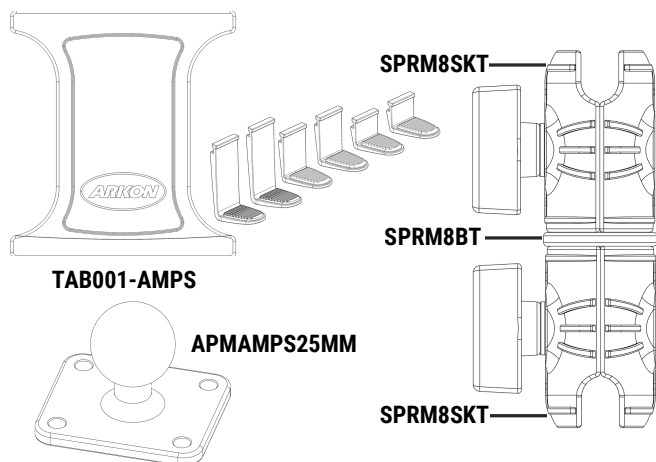

## Includes:

- 1 - Slim-Grip® Tablet Holder with Support Legs (TAB001-AMPS)
- 2 - Metal 4-Hole AMPS to 25mm Ball Adapter (APMAMPS25MM)
- 1 - OCTO™ Series Double Button (SPRM8BT)
- 2 - OCTO™ Series 25mm Ball with Octagon Button Arm (SPRM8SKT)

## Please note the TAB001-AMPS hardware specifications:

4 - M4 x 12mm Screws (Included)

**Important:** Clean the application surface and make sure it is free of dirt, dust, and grease before installation.

## Leg selection guide


Recommended legs to use based on tablet with or without a case

- For tablets size min **6"** to **8.25"** max we recommend using 4 small legs
- For tablets size min **6.75"** to **9.12"** max we recommend using 2 small legs and 2 medium legs
- For tablets size min **8.31"** to **10.75"** max we recommend using 2 medium legs and 2 large legs
- For tablets size min **9.12"** to **11.50"** max we recommend using 4 large legs

**1**

## Install the AMPS adapter plate to the holder


Align the AMPS 4-hole adapter on the back of the holder. Then, insert the four mounting screws through the AMPS 4-hole ball adapter plate and into the holder. Finally, secure the screws tightly.

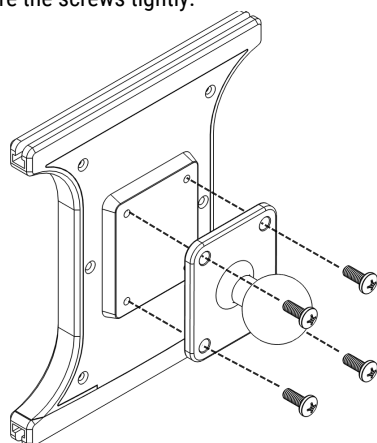

**3**

## Mount Installation


Securely attach the pedestal to a mounting surface using hardware (**not included**).

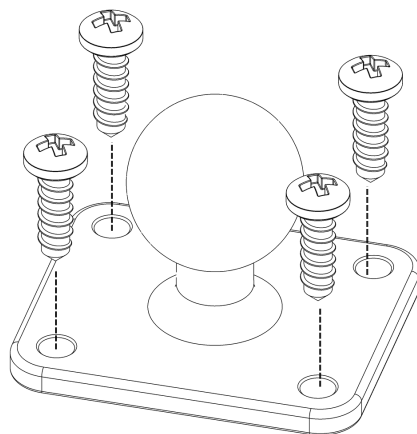

**2**

## Assemble the components


Locate the assembled arm and rotate both end knobs counterclockwise to loosen them. Next, attach the 25mm ball to each end. Finally, tighten the knobs to ensure that everything is securely in place.

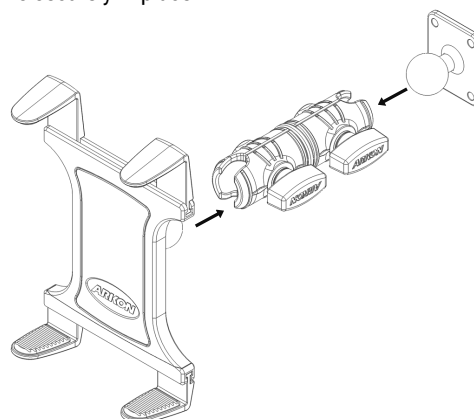

**4**

## Fully assembled

Refer to the image below for the full assembled product.

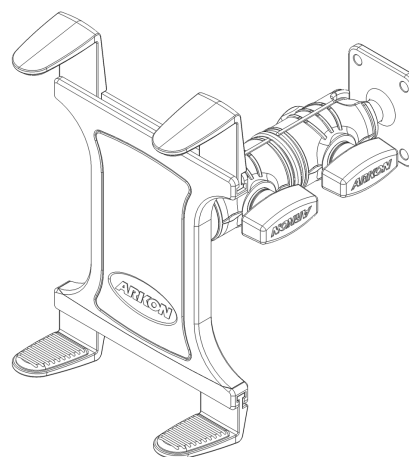

## WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

## WARNING

Arkion® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkion® products near areas that interfere with operation of vehicles. Arkion® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkion® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

Continued on page 2

**ARKION MOUNTS**

USA (800) 841-0884  
INT'L (626) 254-9005  
Monday - Friday 9 am - 5 pm PST

arkon.com  
Designed in USA  
©Arkion Resources, Inc.


Need assistance?  
Scan to email our  
Arkion® customer  
service team.



**5**

## Installing the legs to the holder


Install the support legs required based on the recommendations listed above. Slide the support legs into the holder's support leg channels.

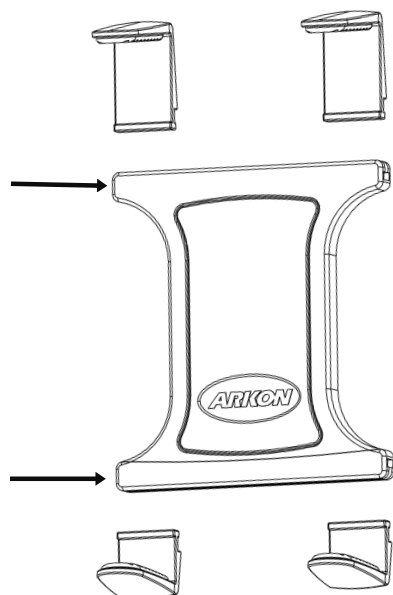

**6**

## Extend the spring-loaded mechanism


To extend the legs, insert one end of the tablet into the bottom support legs.

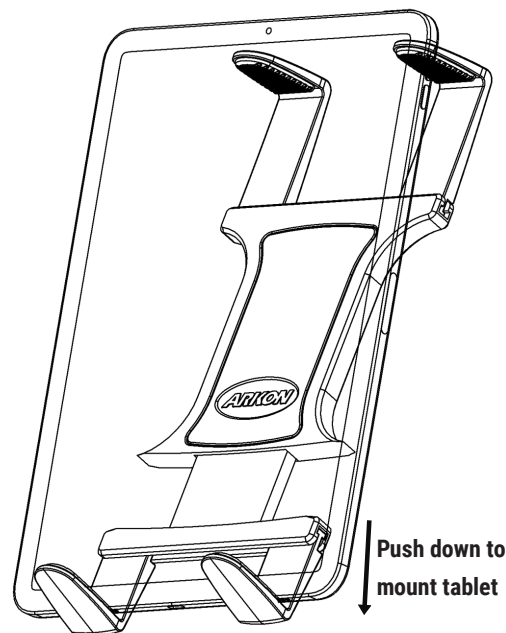

**7**

## Install the tablet


With the holder's spring-loaded support legs expanded, lay the tablet flat on the holder.

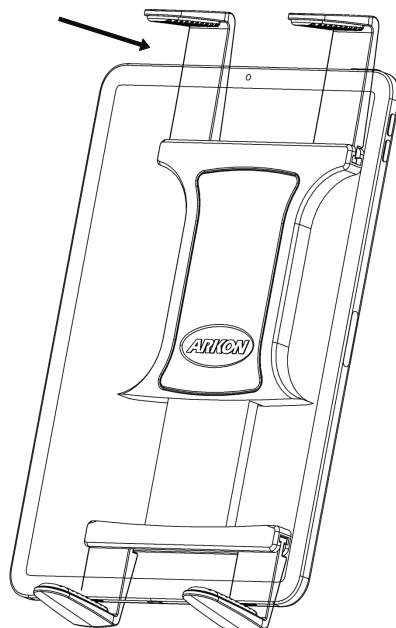

**8**

## Release the tablet to secure

Gently release the tablet into the holder, allowing the bottom spring-loaded support legs to secure the tablet.

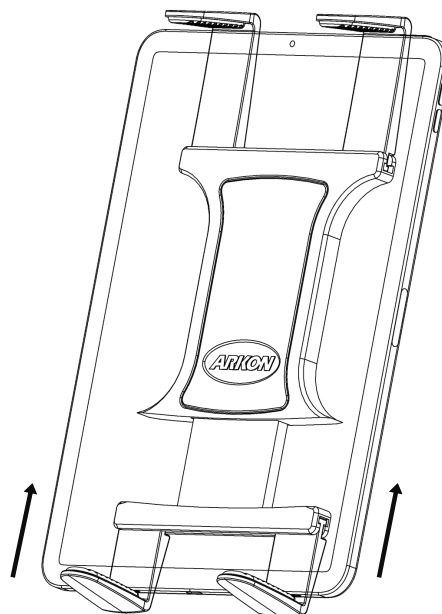

### WARNING

CHOKING HAZARD - Keep out of reach from children under 8 yrs. as they can choke or suffocate on parts included with this system

### WARNING

Arkon® is not responsible for any damages caused to your device or yourself due to the installation or use of this mount. Do not install Arkon® products near areas that interfere with operation of vehicles. Arkon® assumes no responsibility or liability for injury or death as a result of failure to install in a safe location. Arkon® is not responsible for any damages caused to vehicles, product, or people due to the installation or use of this product.

